




# Load Reaction


Load / 100 sq. mm (N)

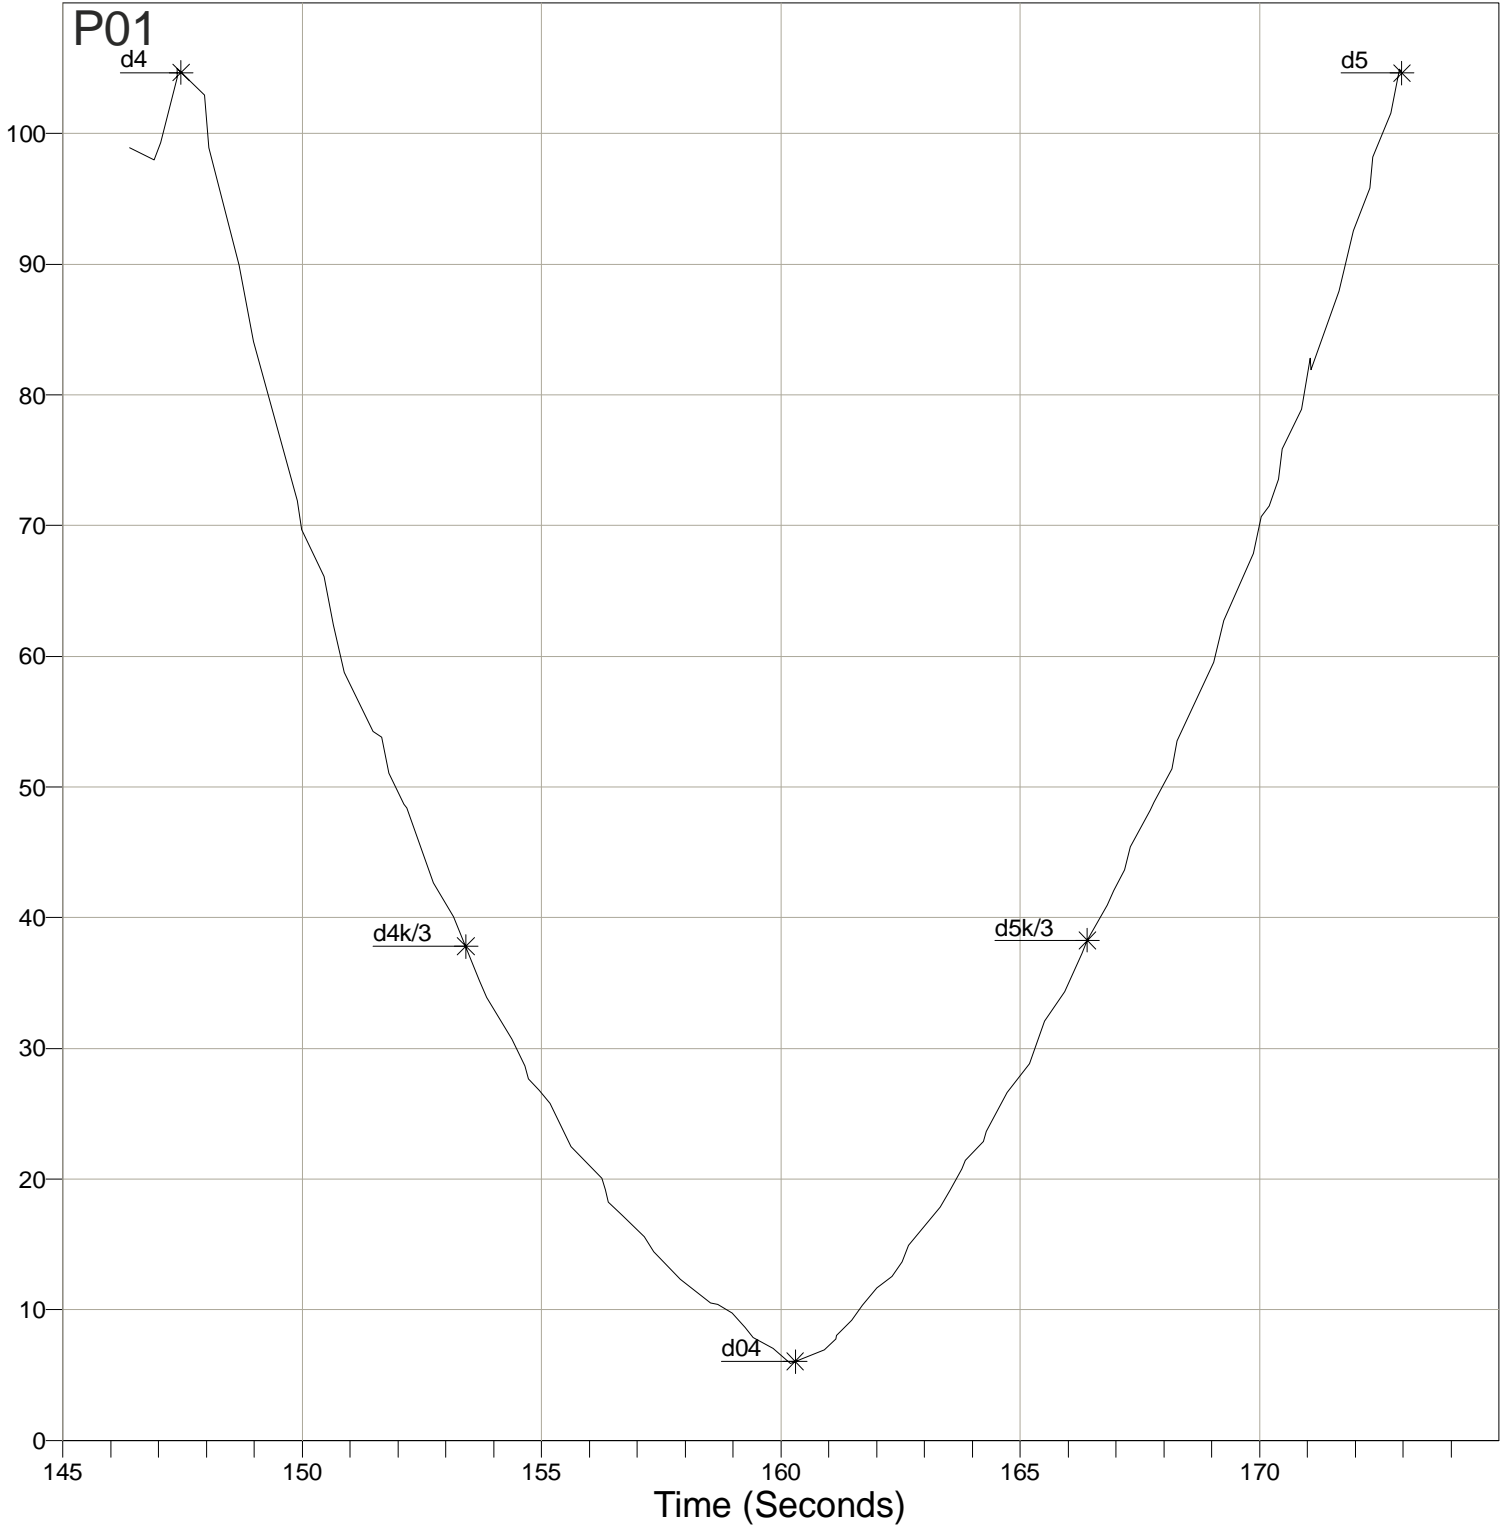



# Load Reaction


Load / 100 sq. mm (N)

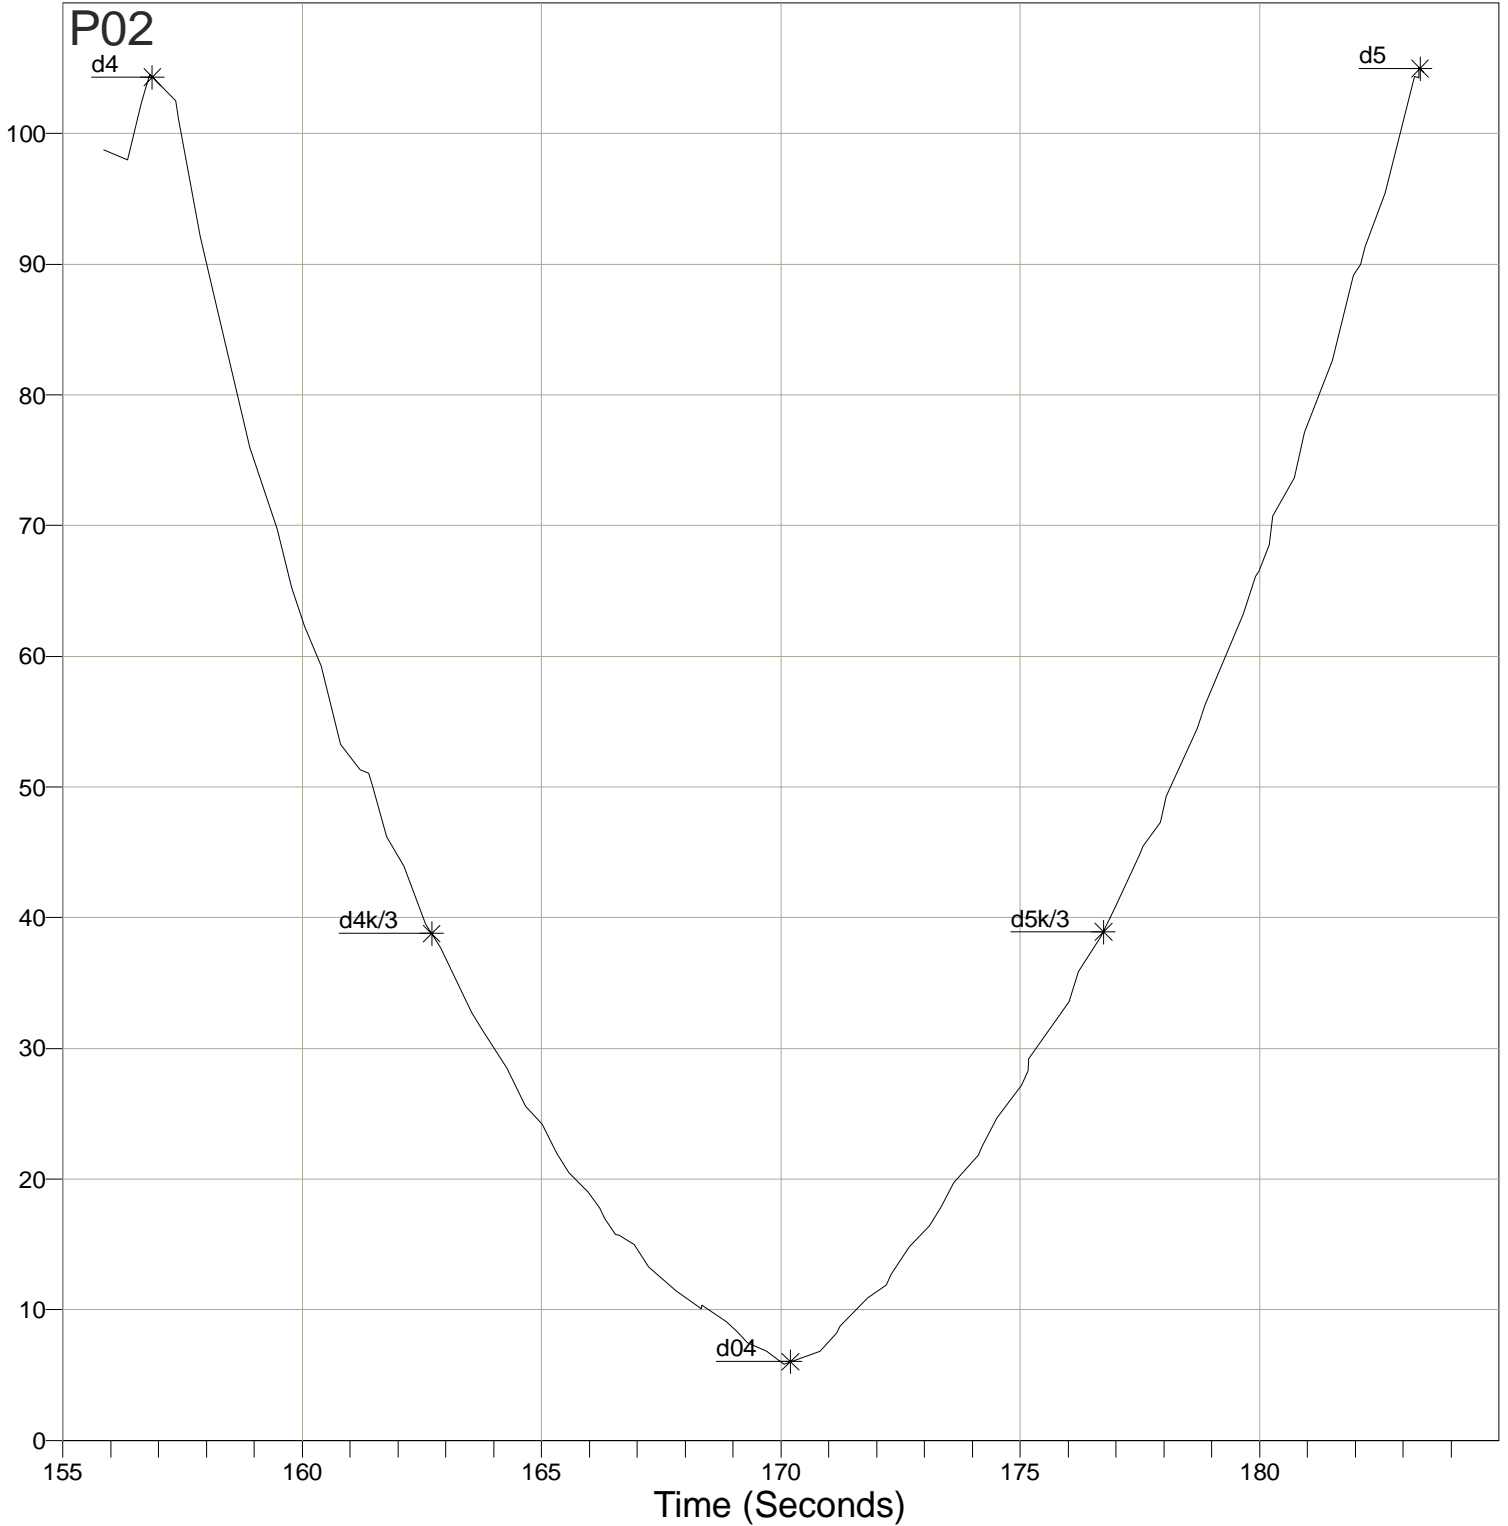



# Load Reaction


Load / 100 sq. mm (N)

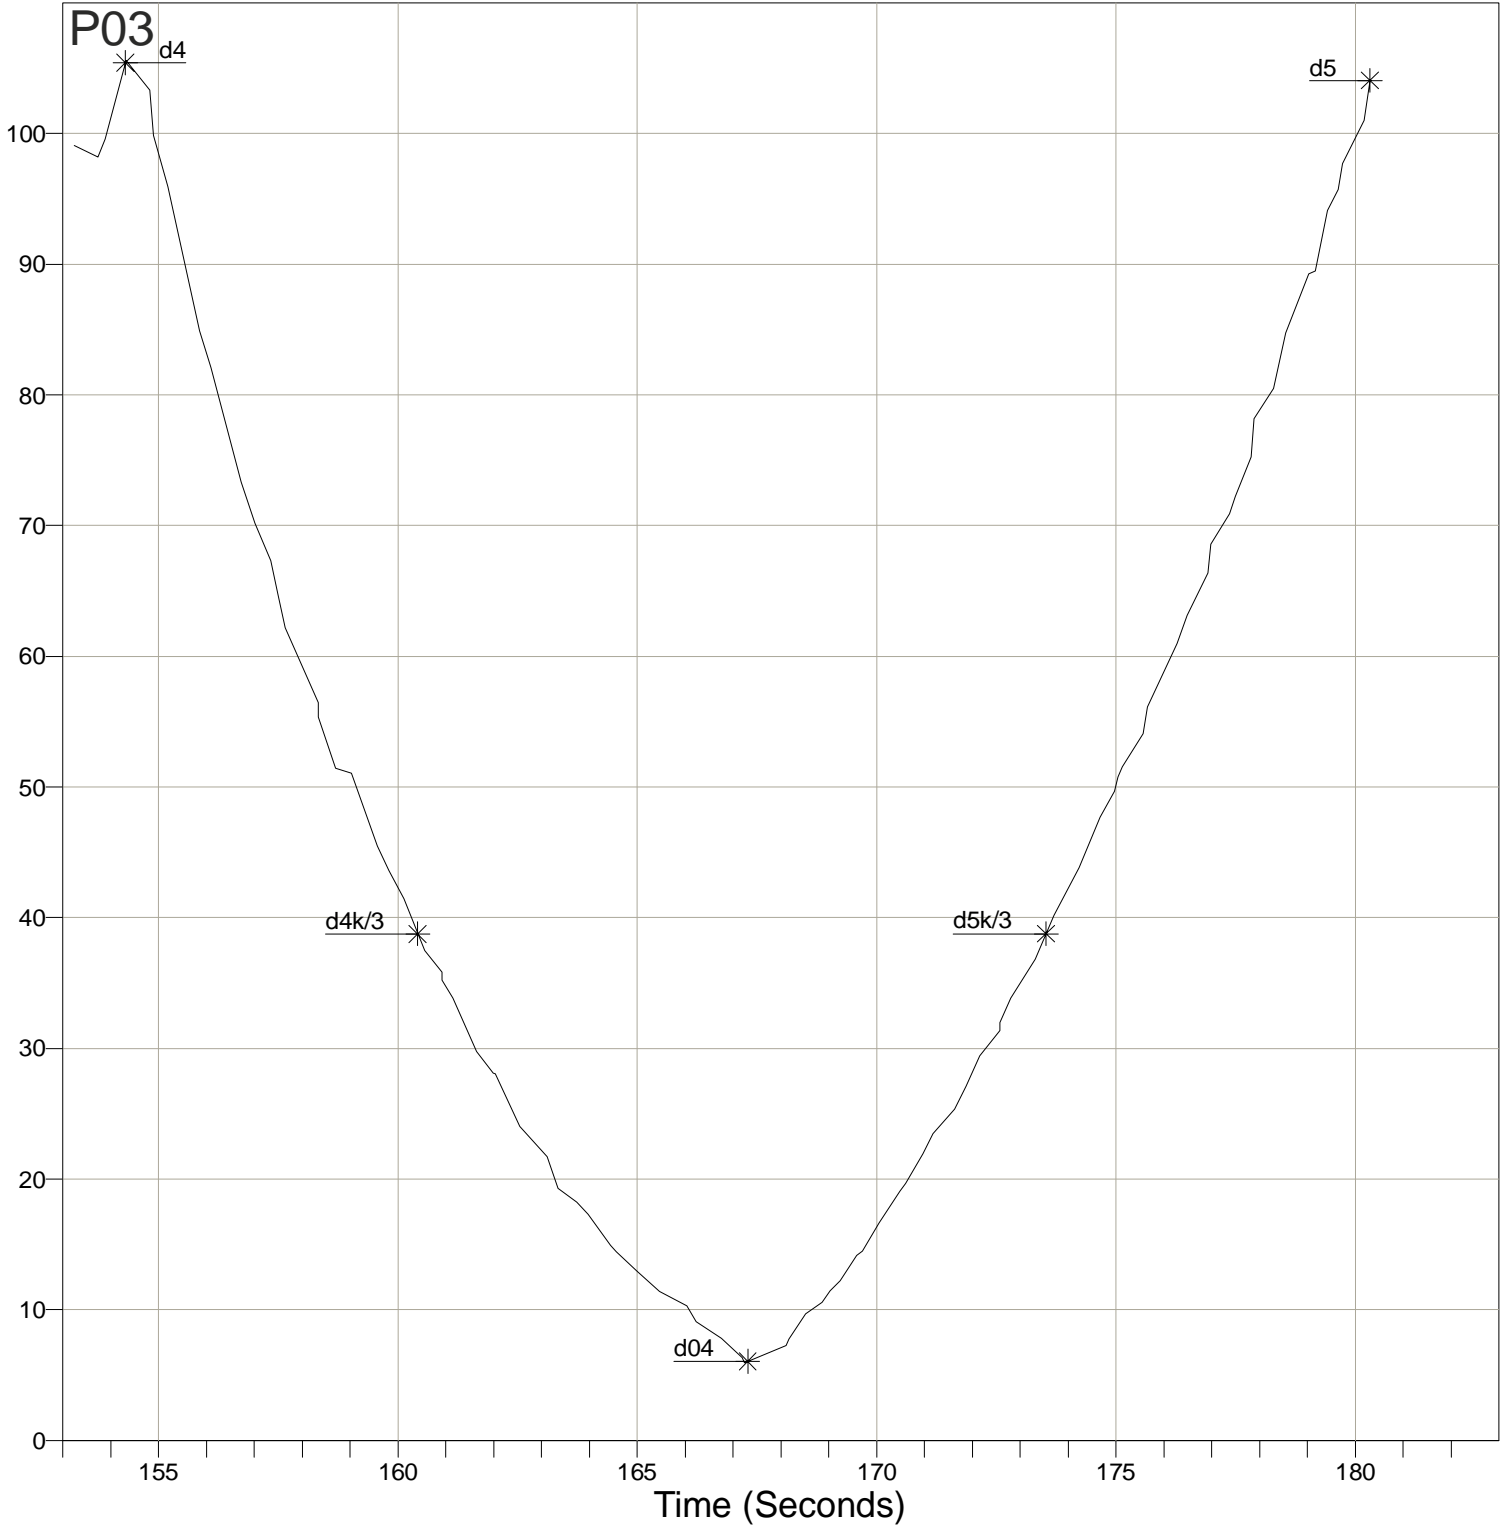



# Load Reaction


Load / 100 sq. mm (N)

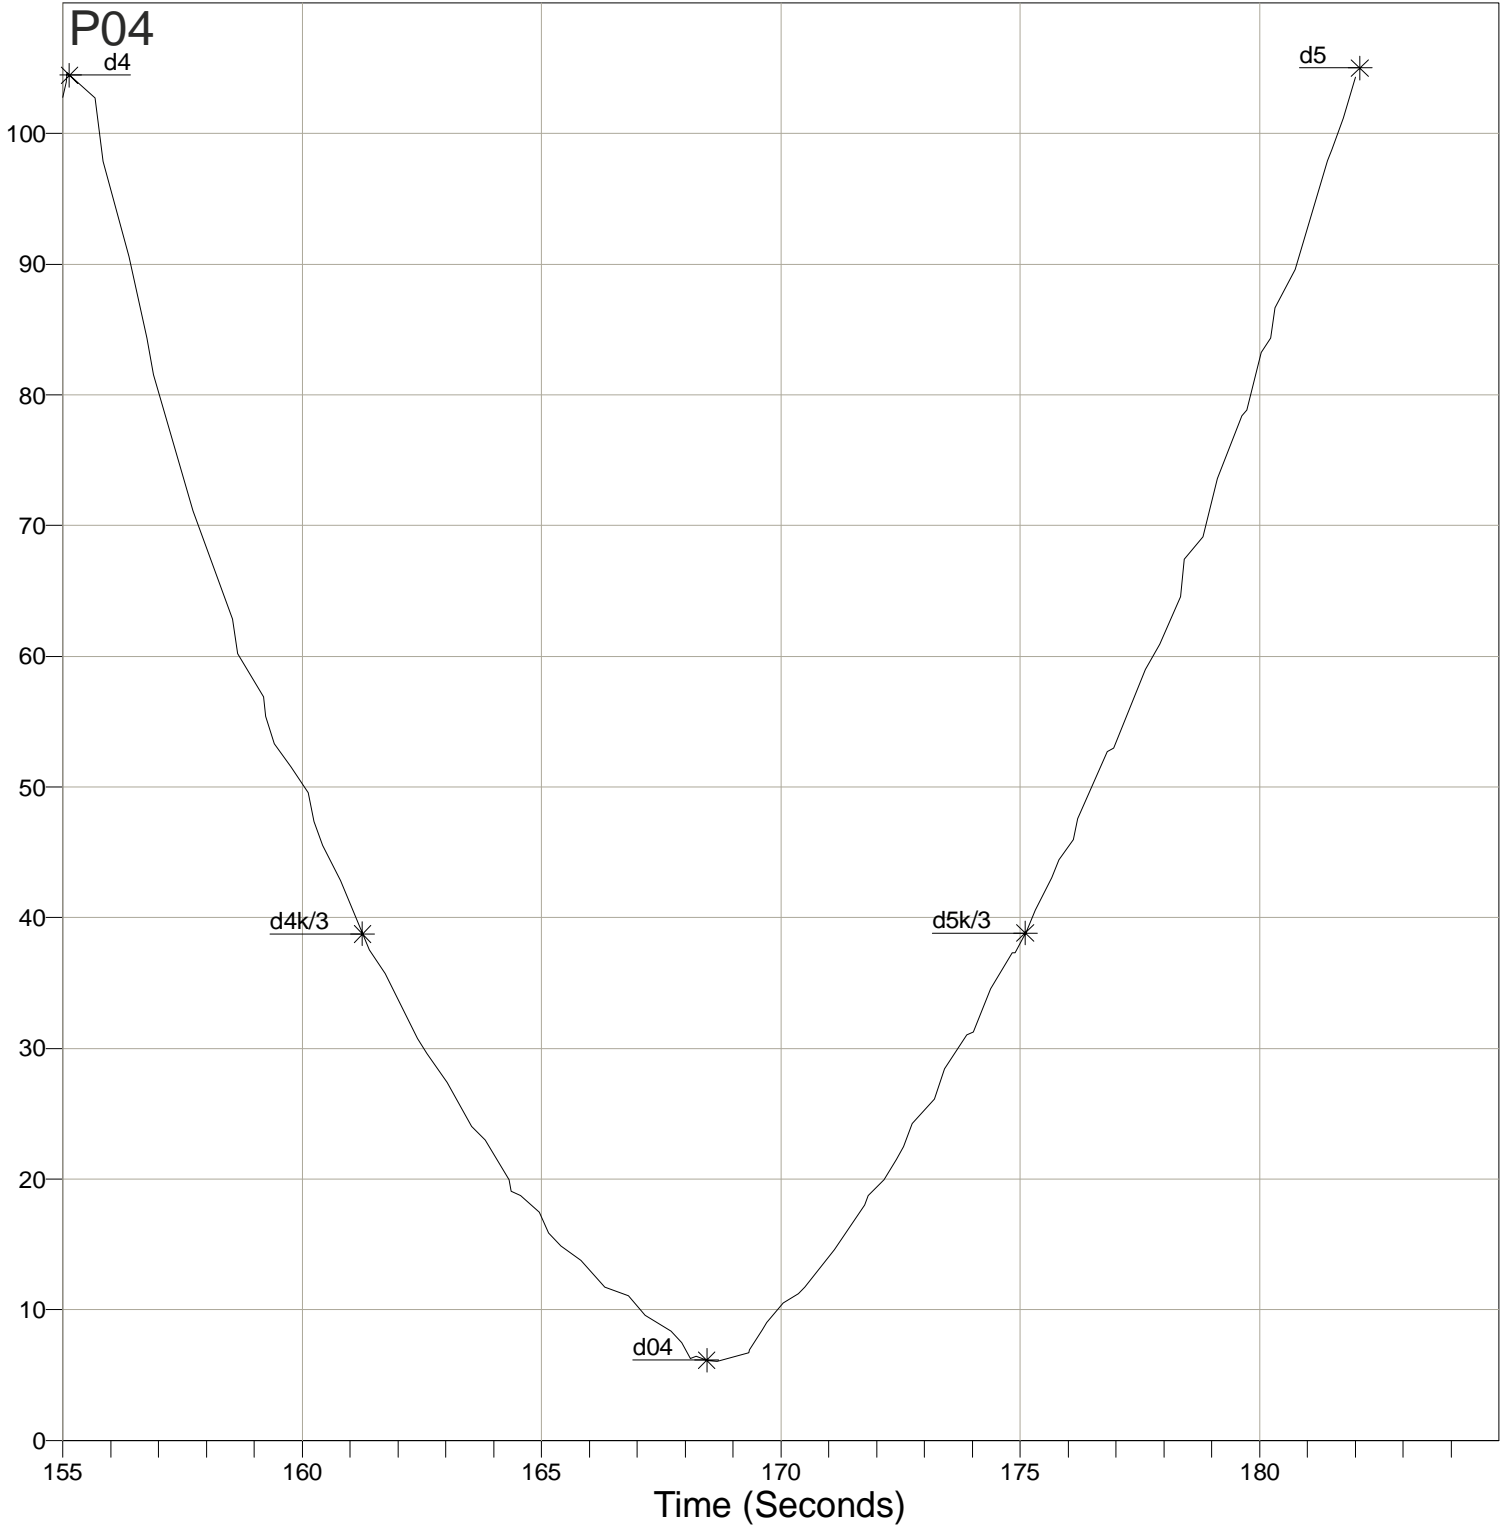



# Load Reaction


Load / 100 sq. mm (N)

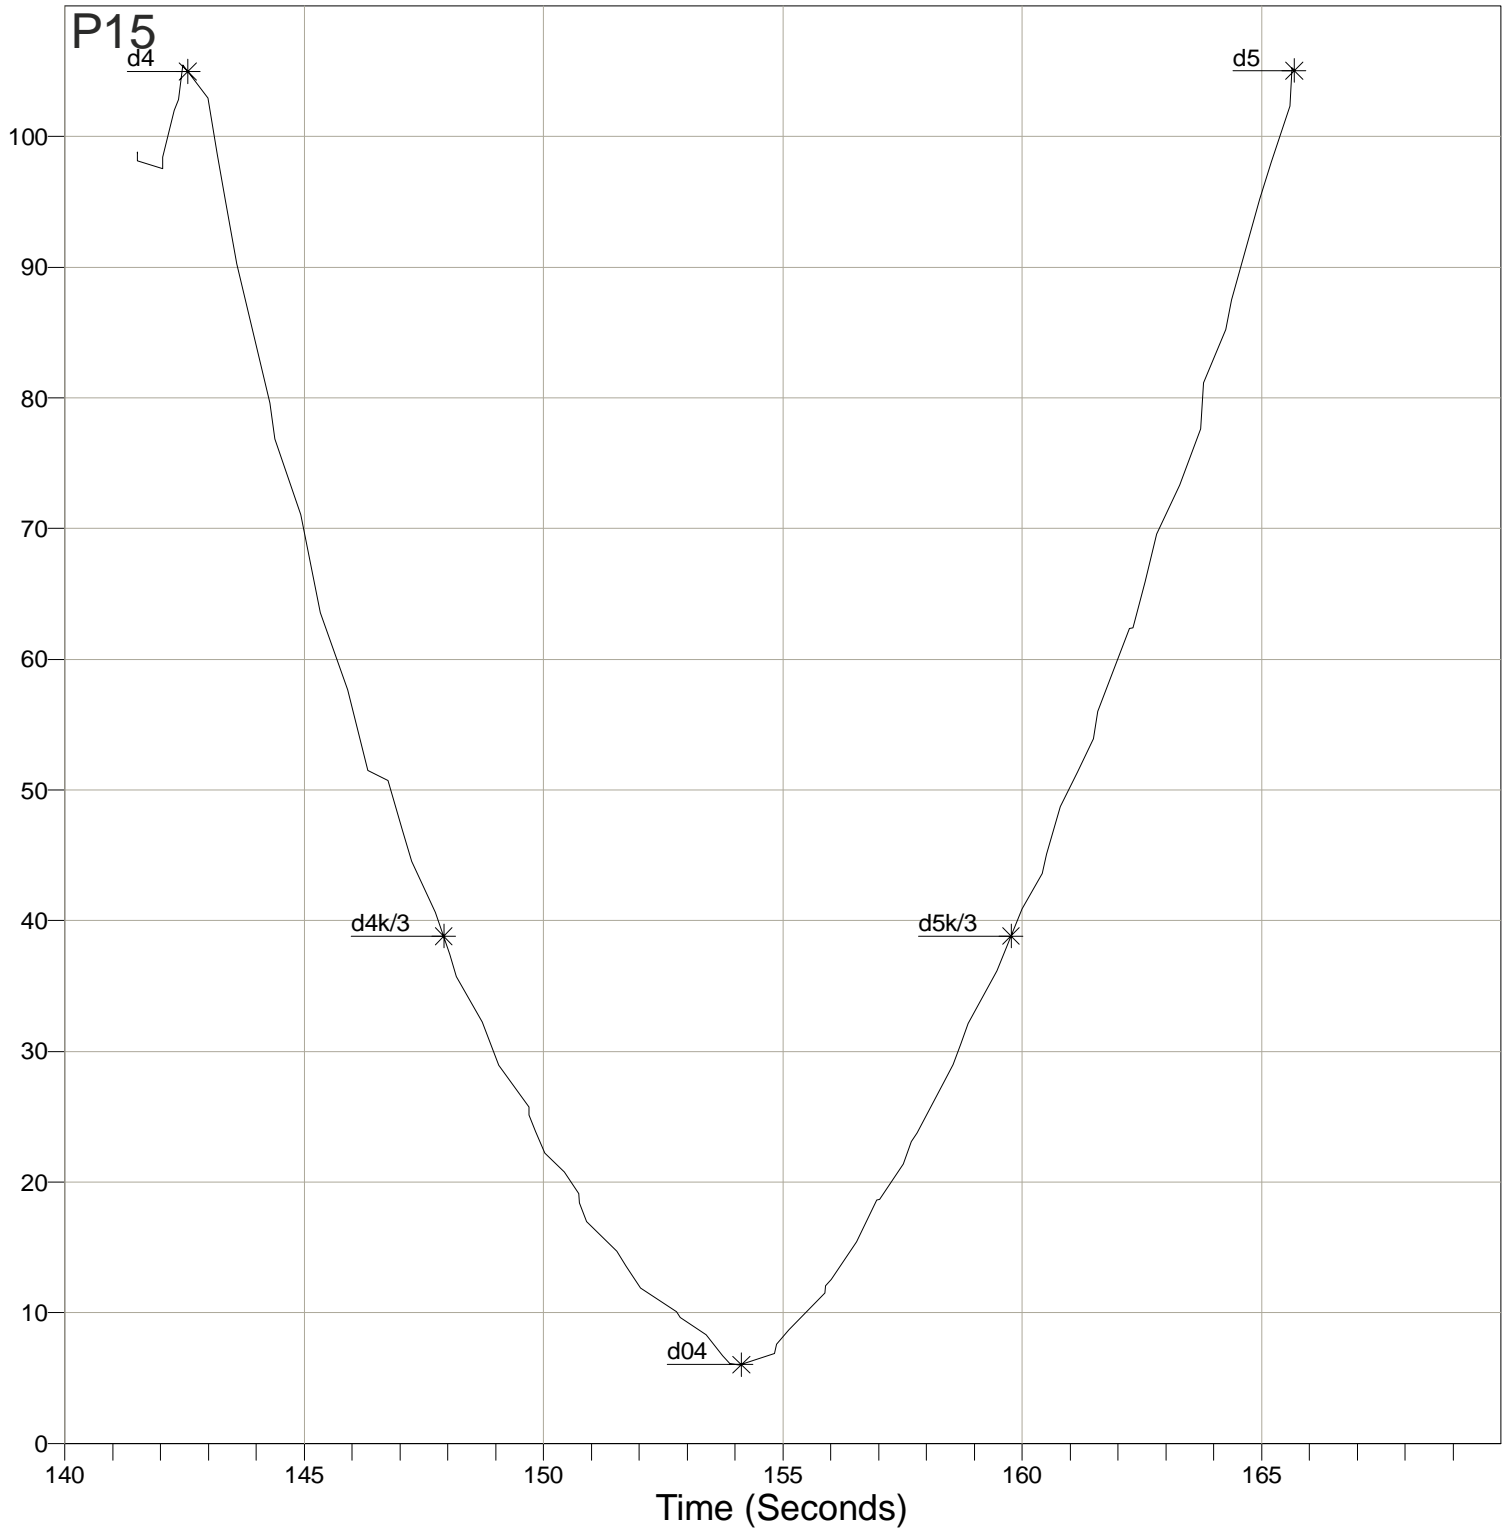



# Load Reaction

Load / 100 sq. mm (N)

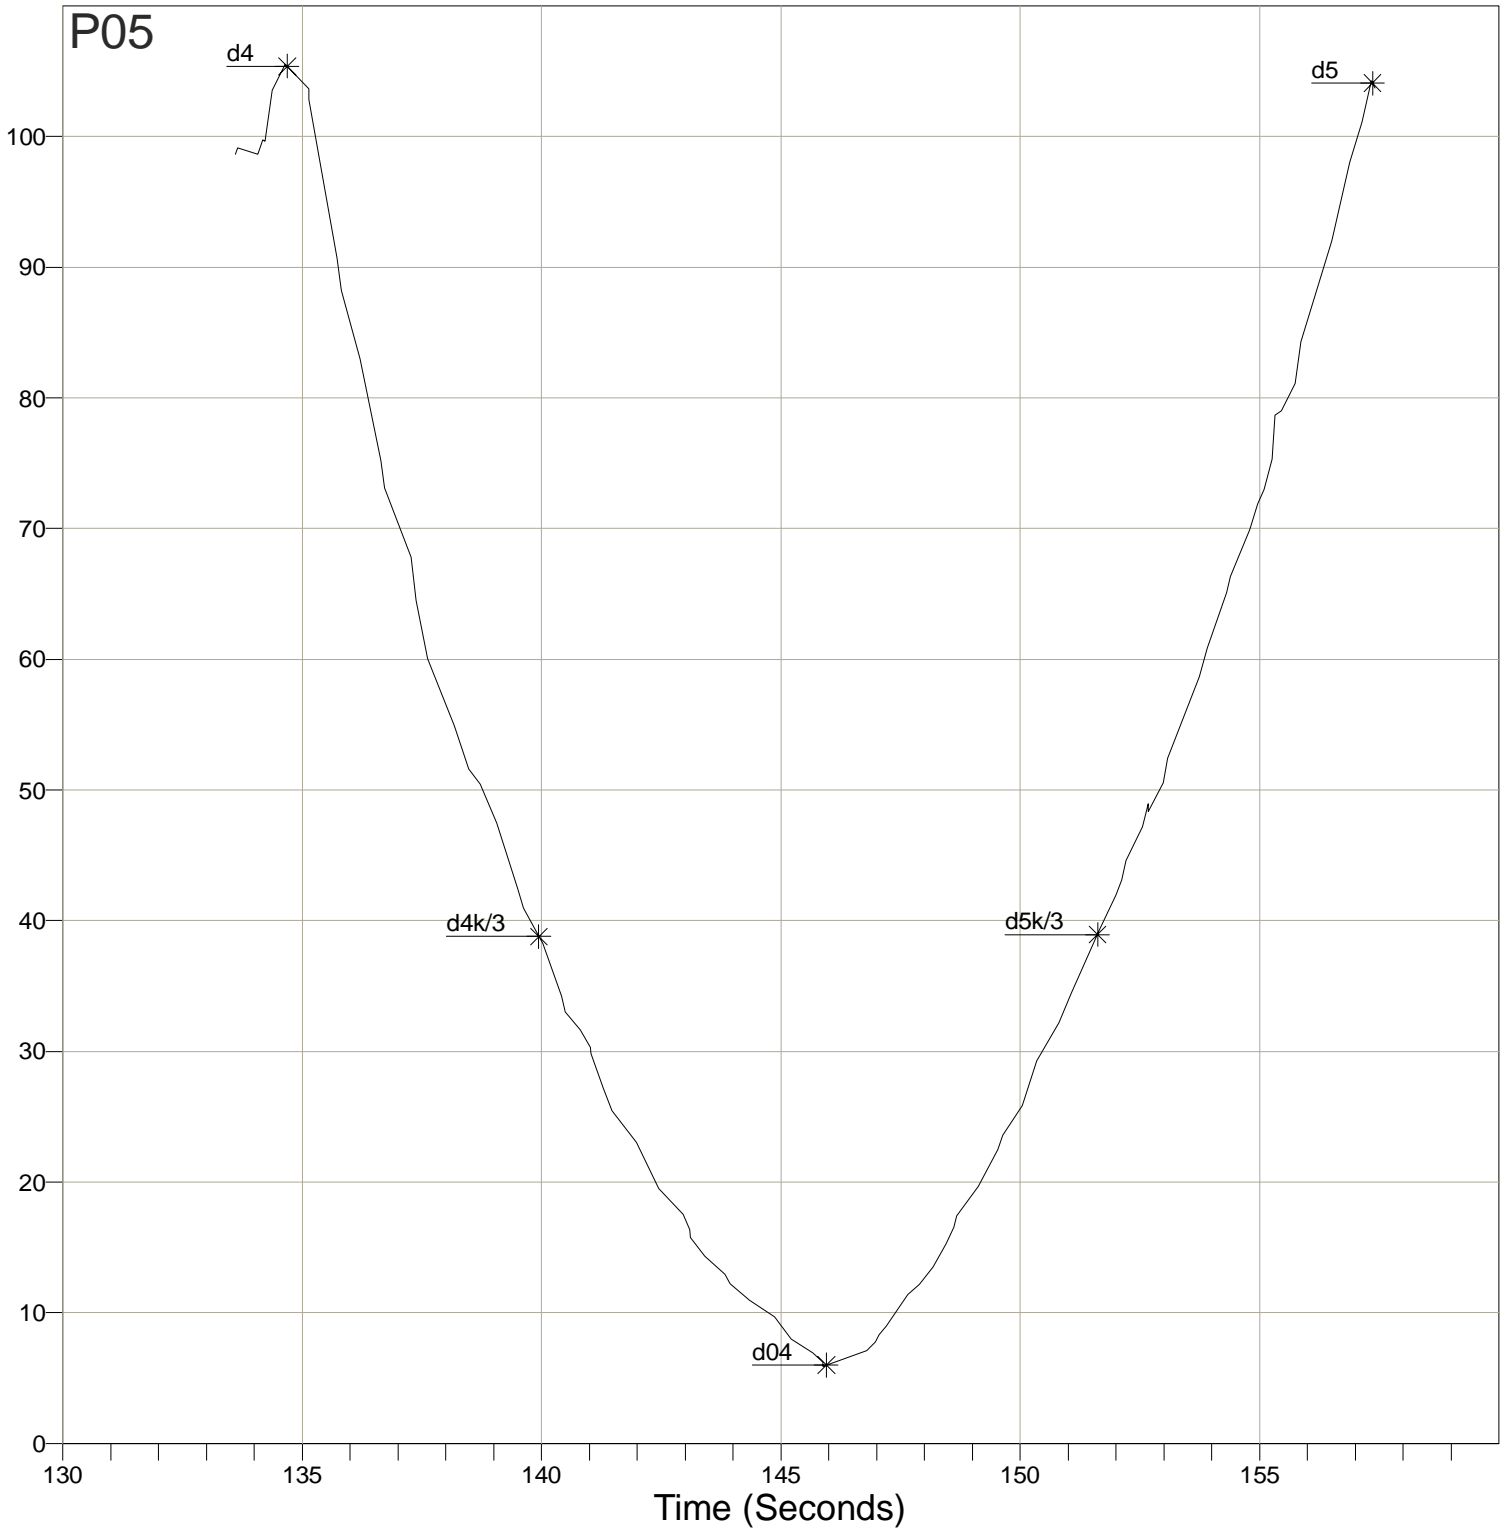




# Load Reaction

Load / 100 sq. mm (N)


P06

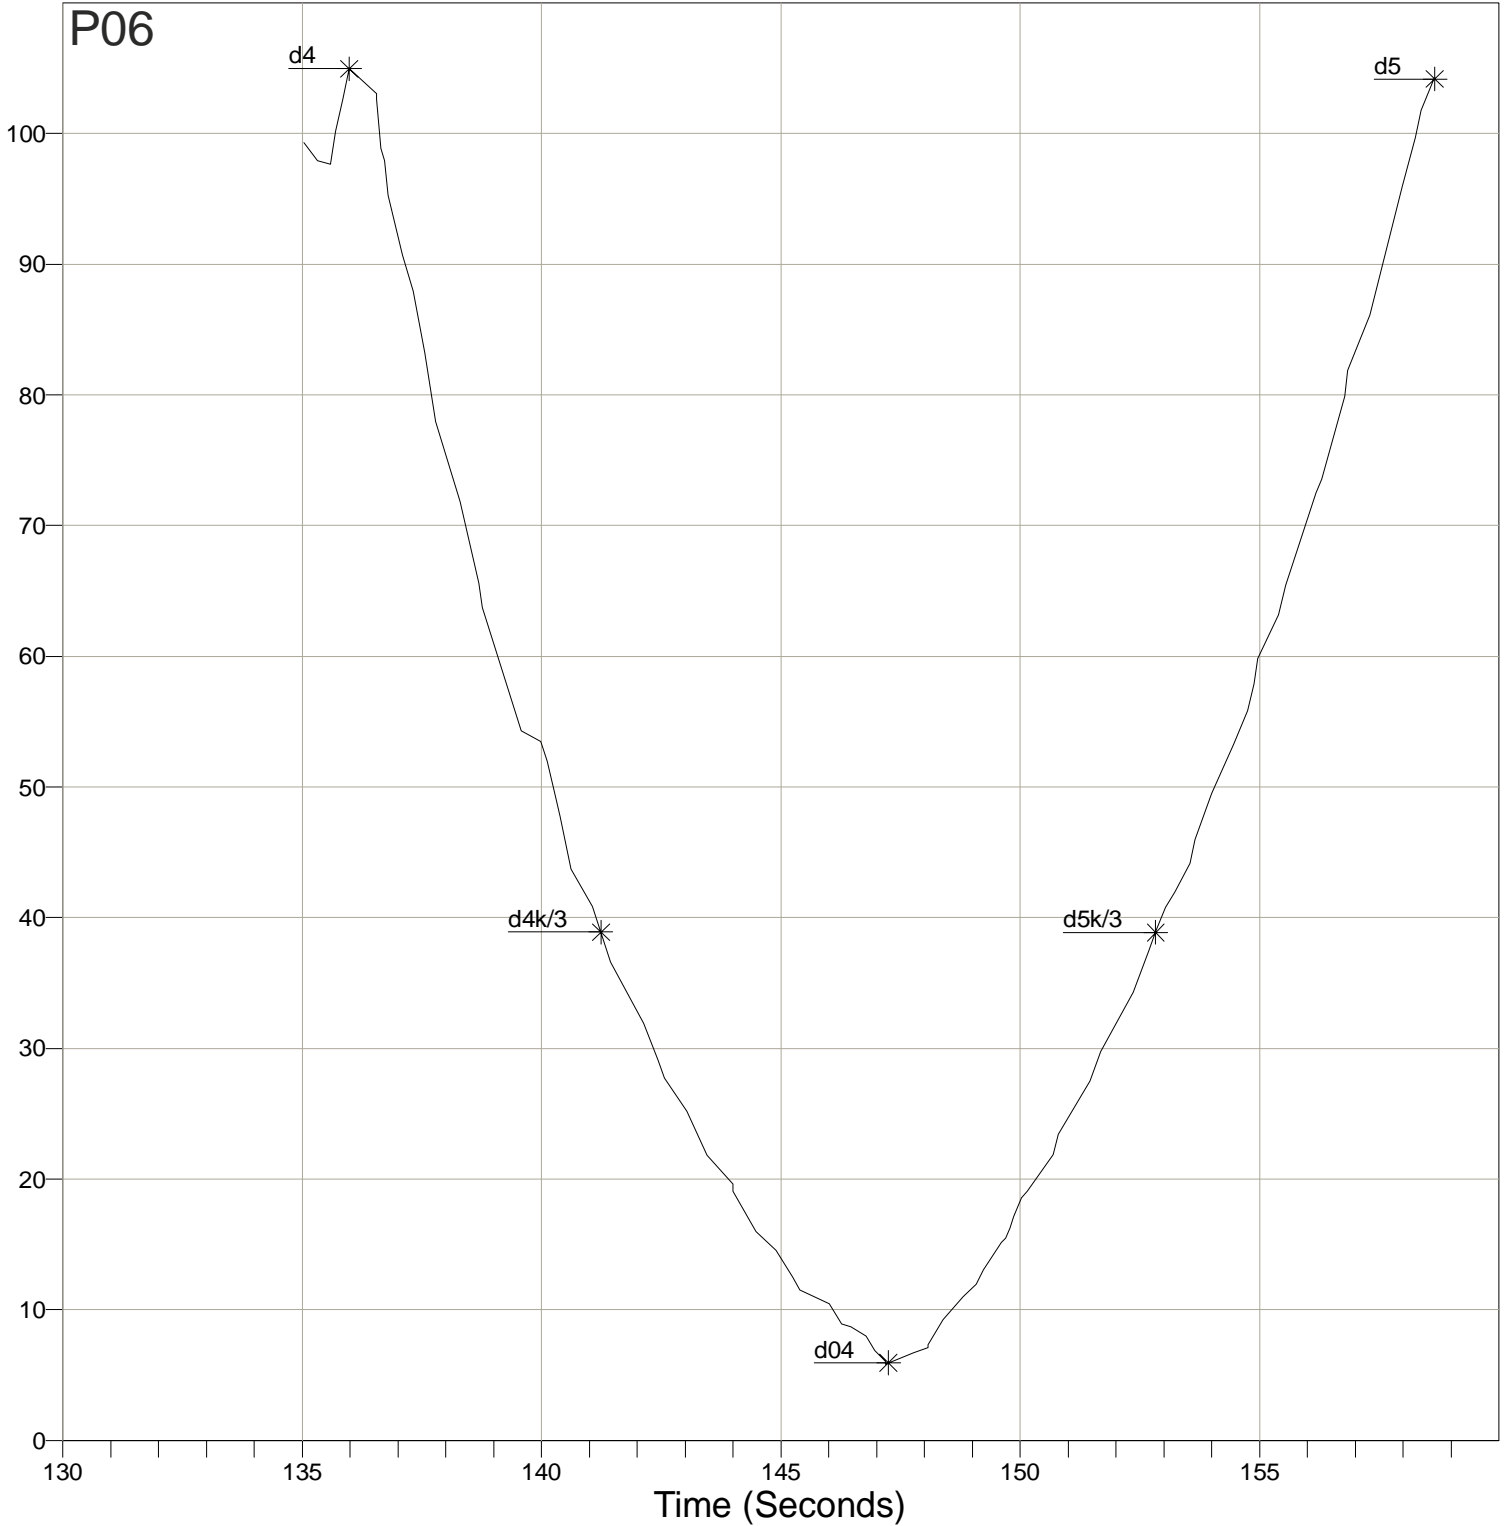



# Load Reaction

Load / 100 sq. mm (N)

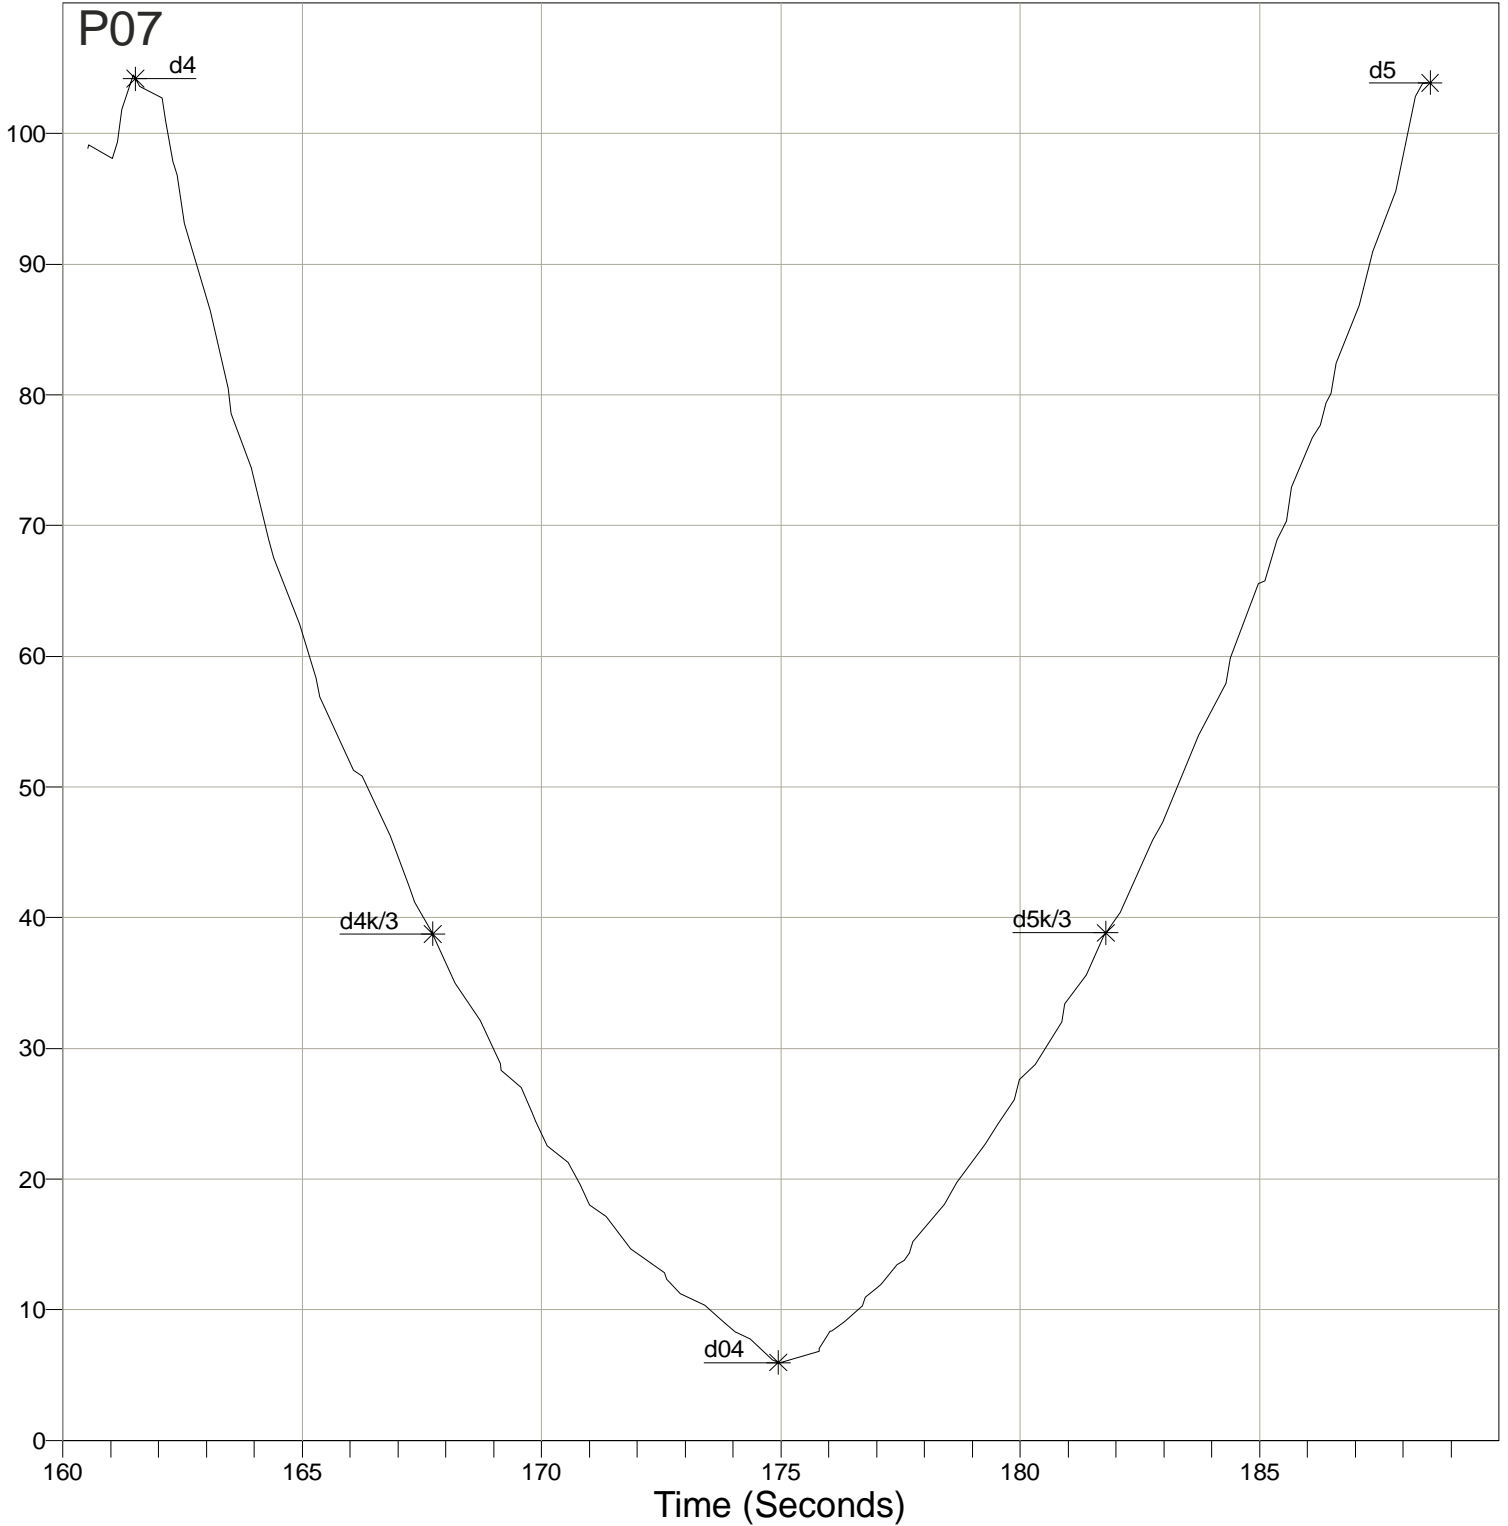






# Load Reaction

Load / 100 sq. mm (N)

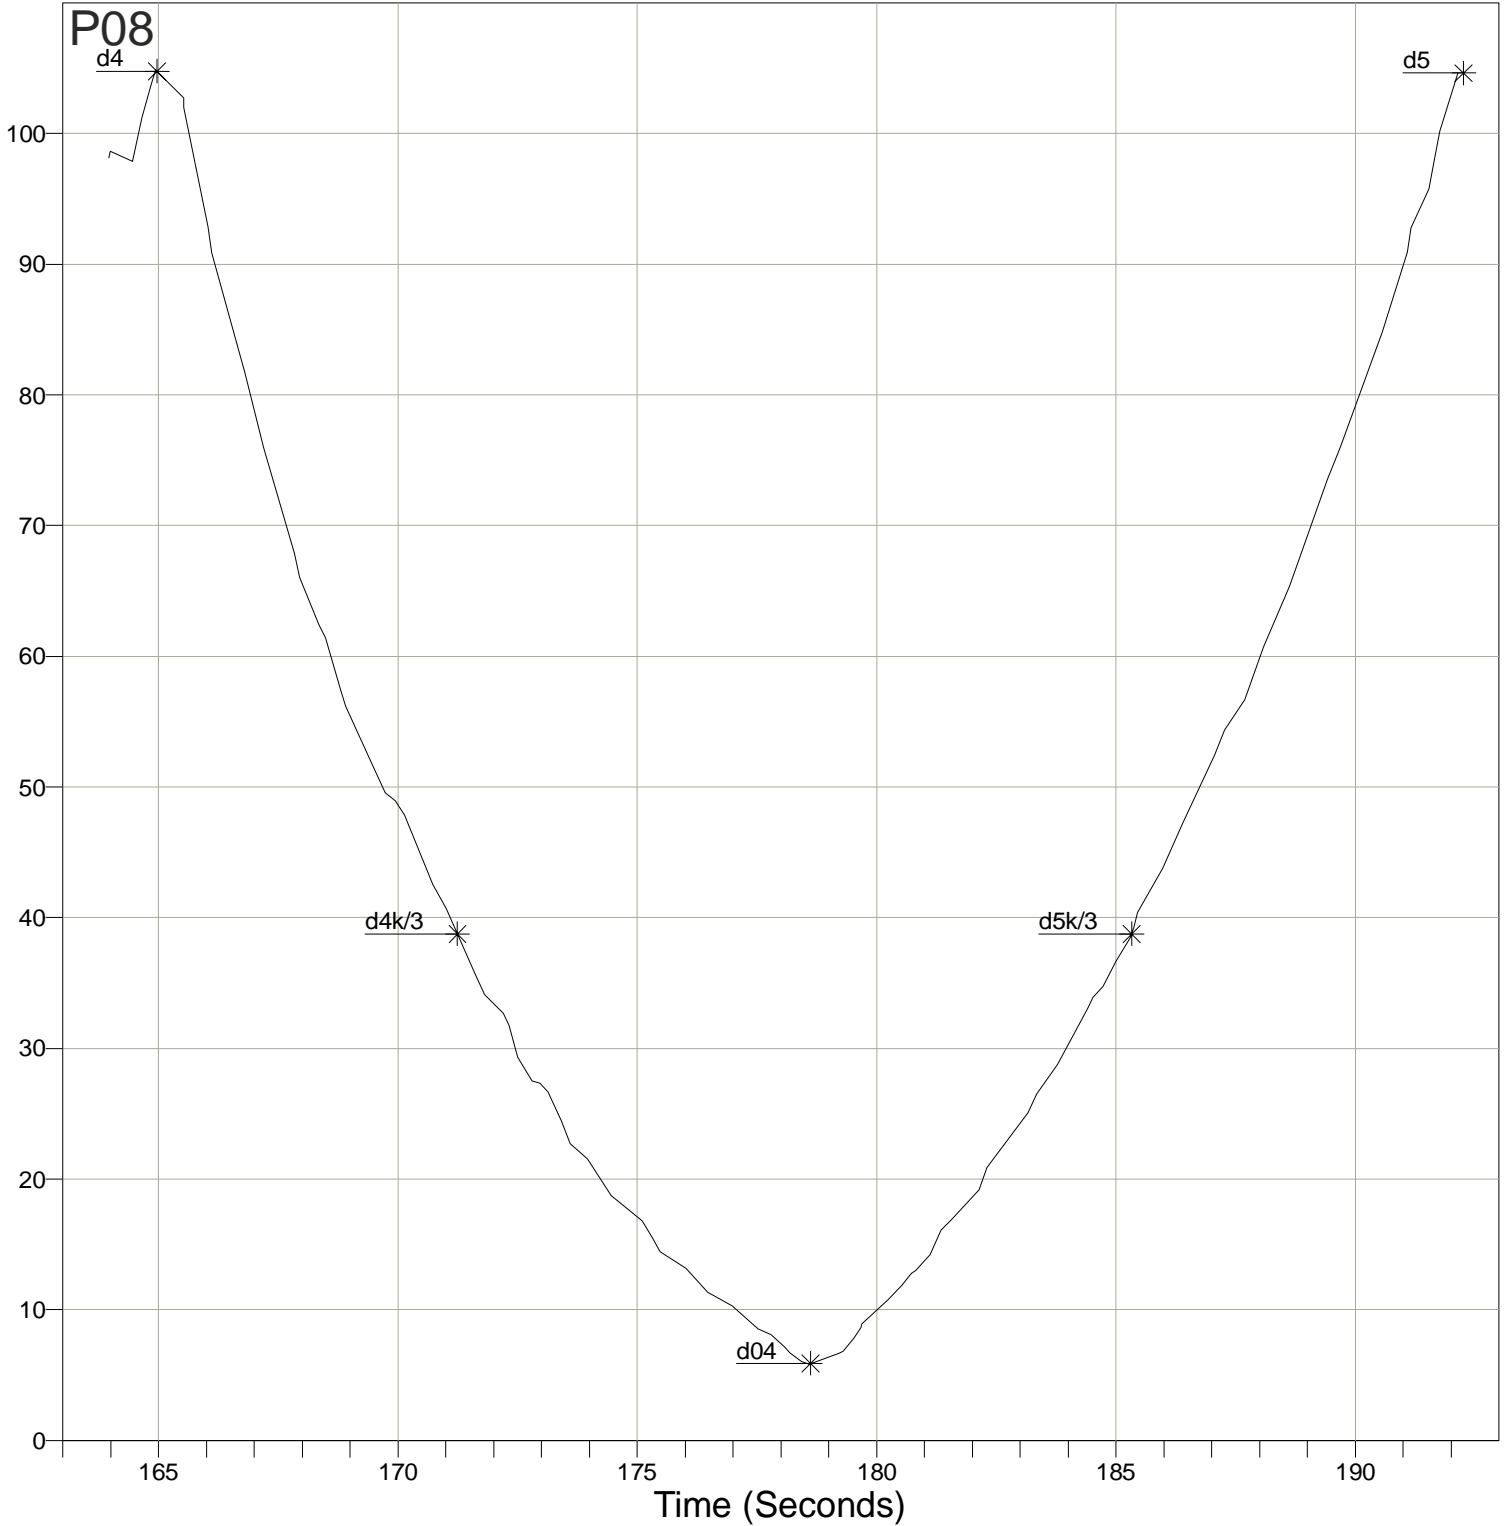




# Load Reaction

Load / 100 sq. mm (N)

P16

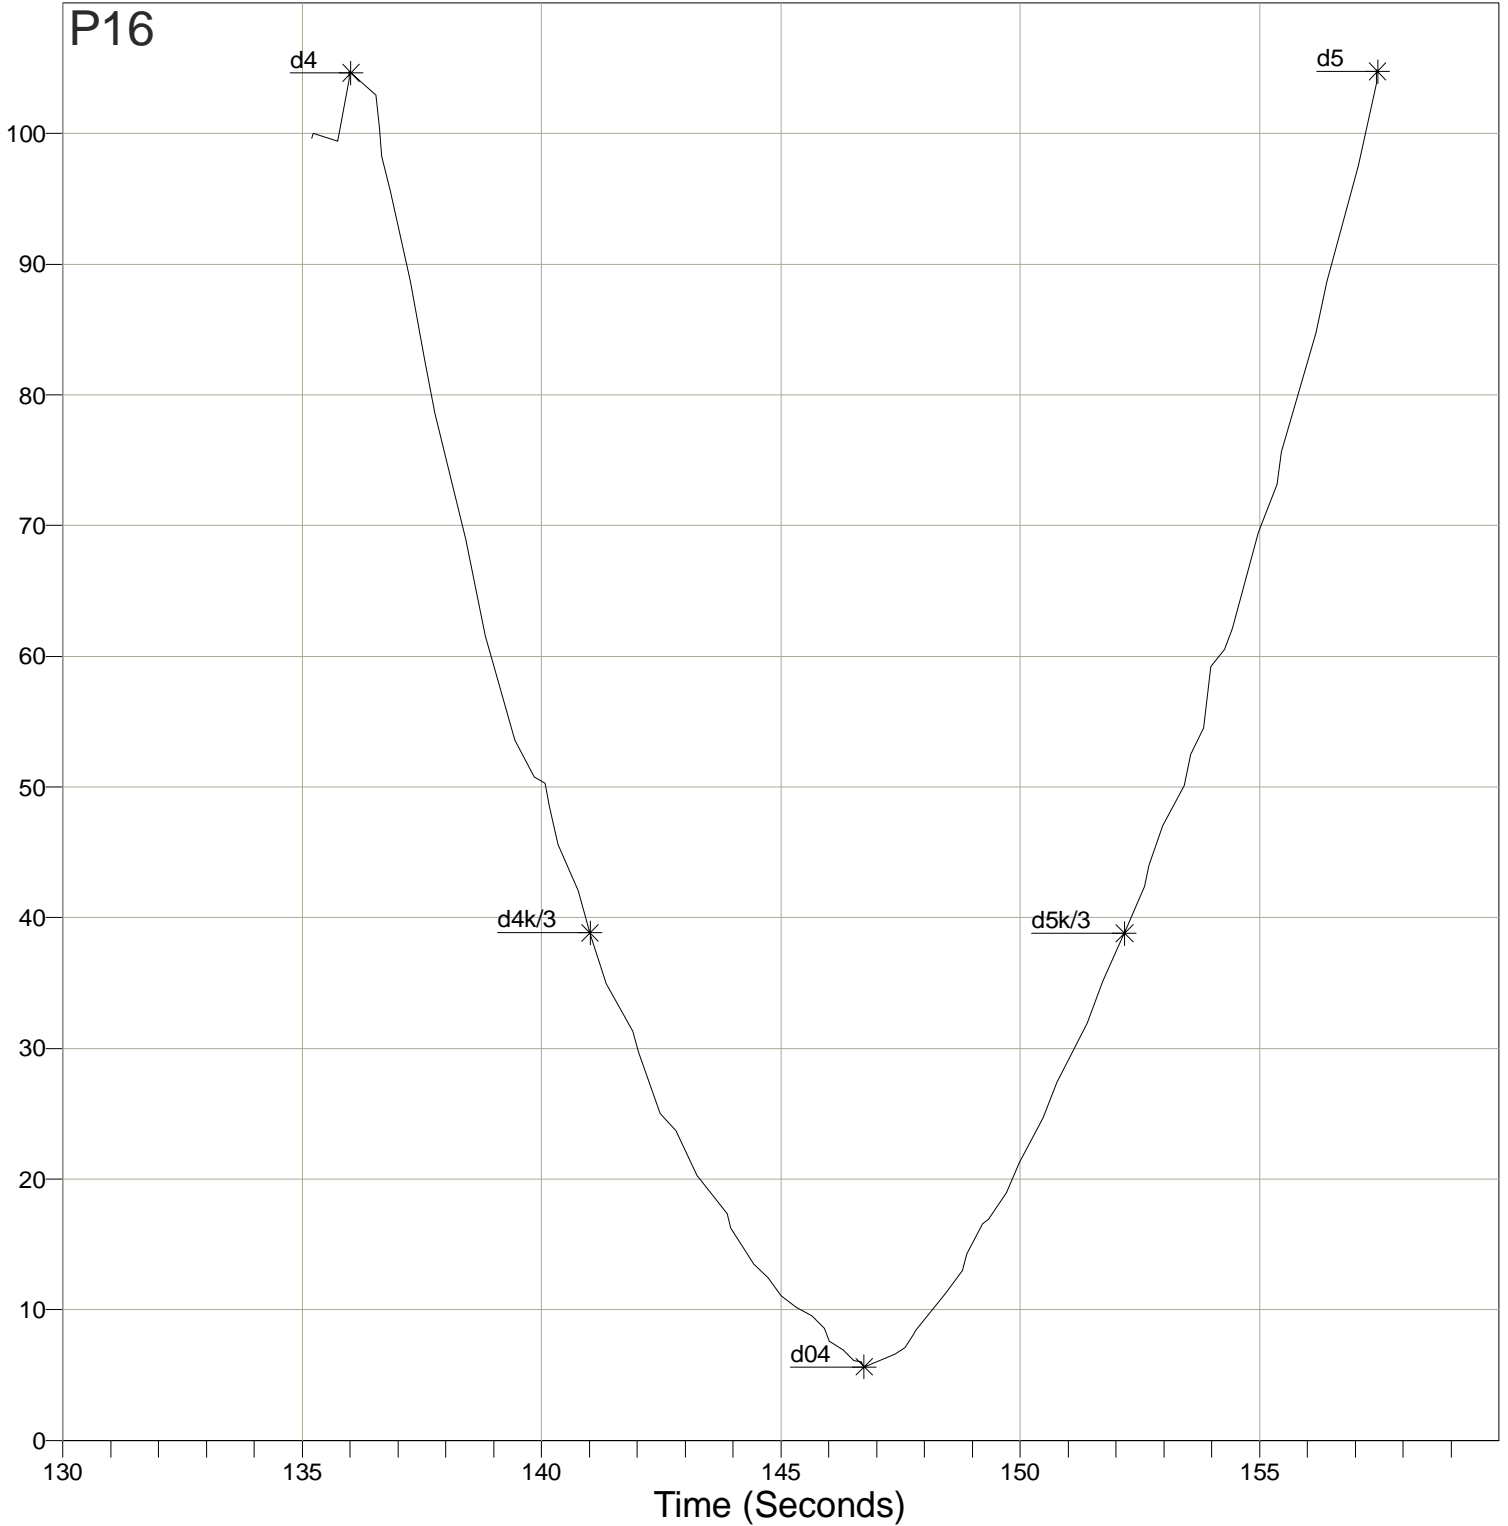




# Load Reaction

Load / 100 sq. mm (N)


P09

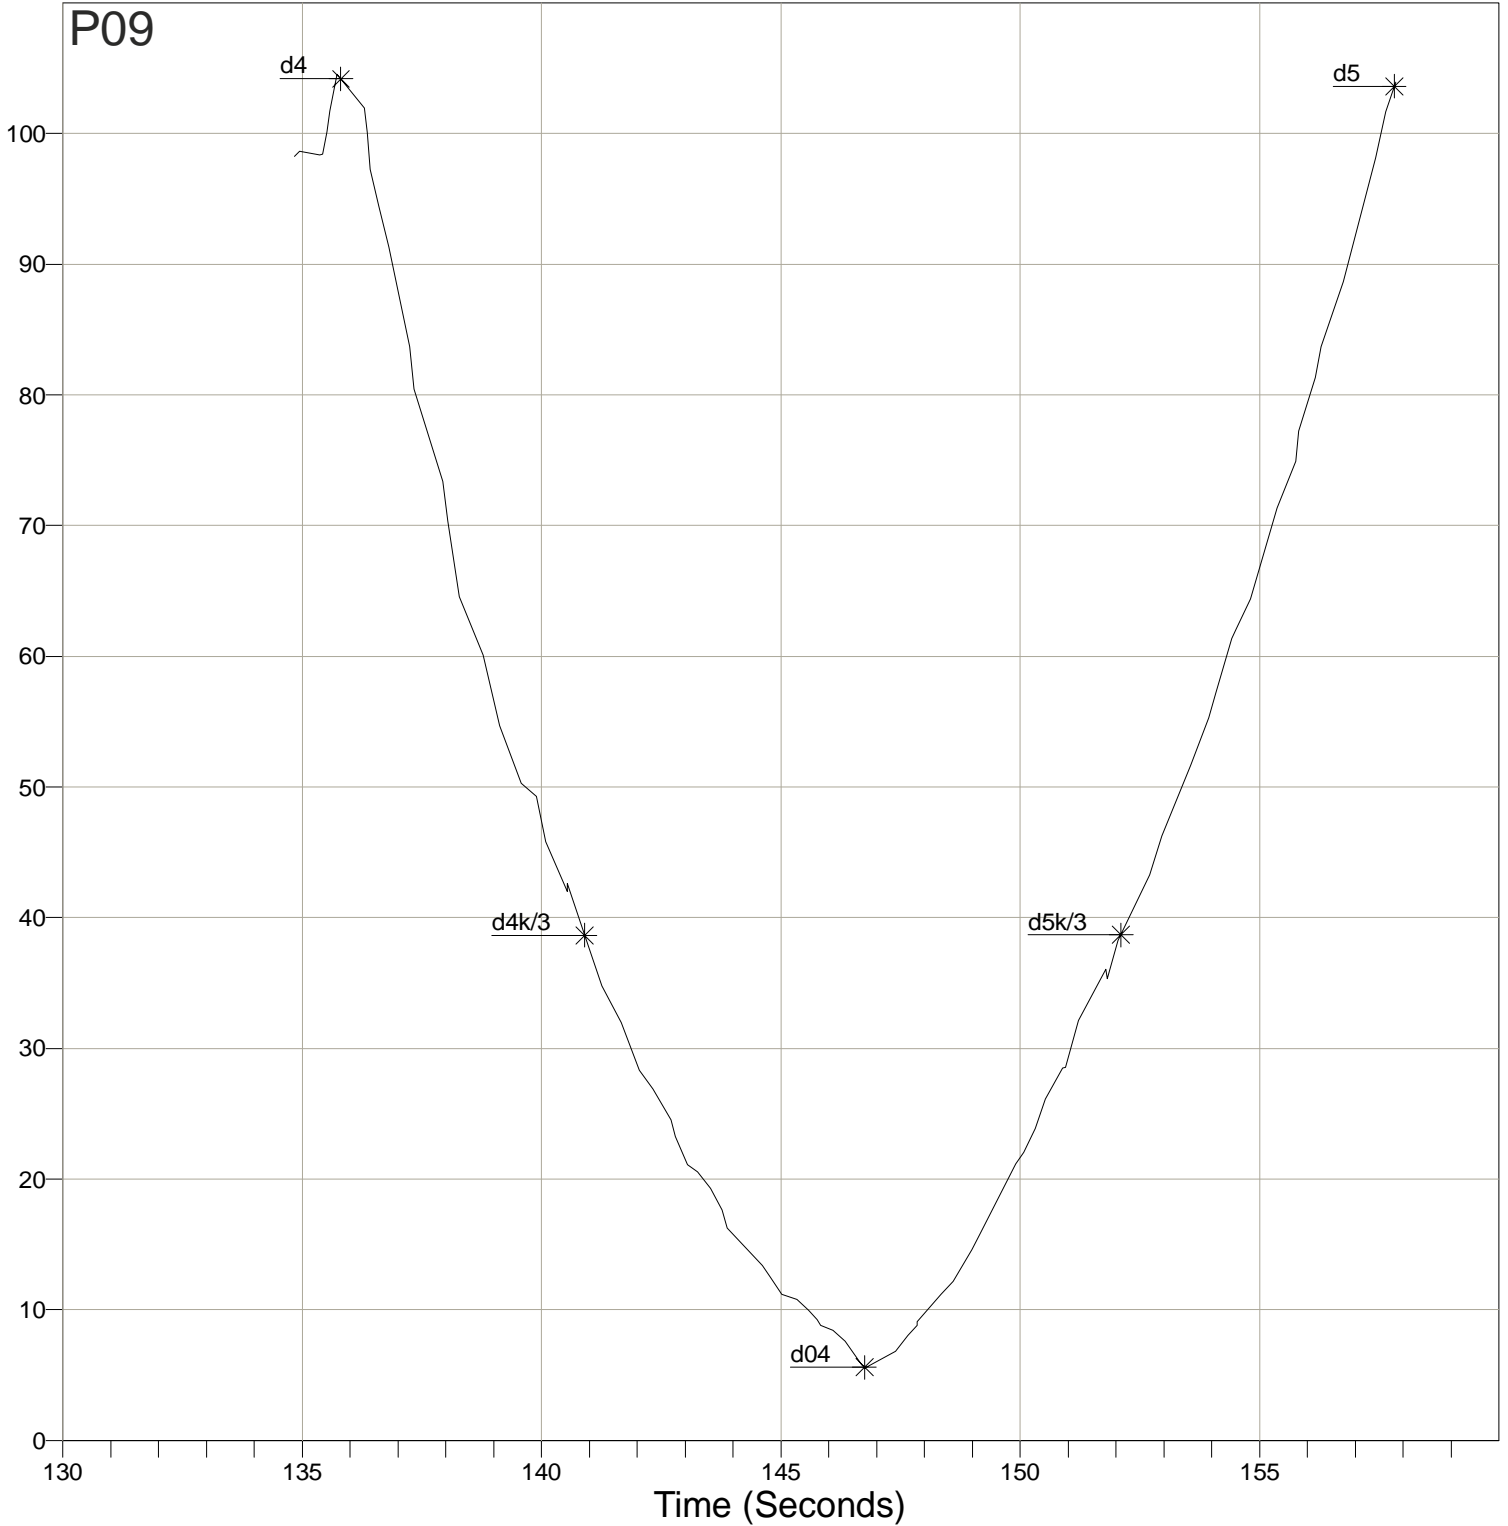



# Load Reaction


Load / 100 sq. mm (N)

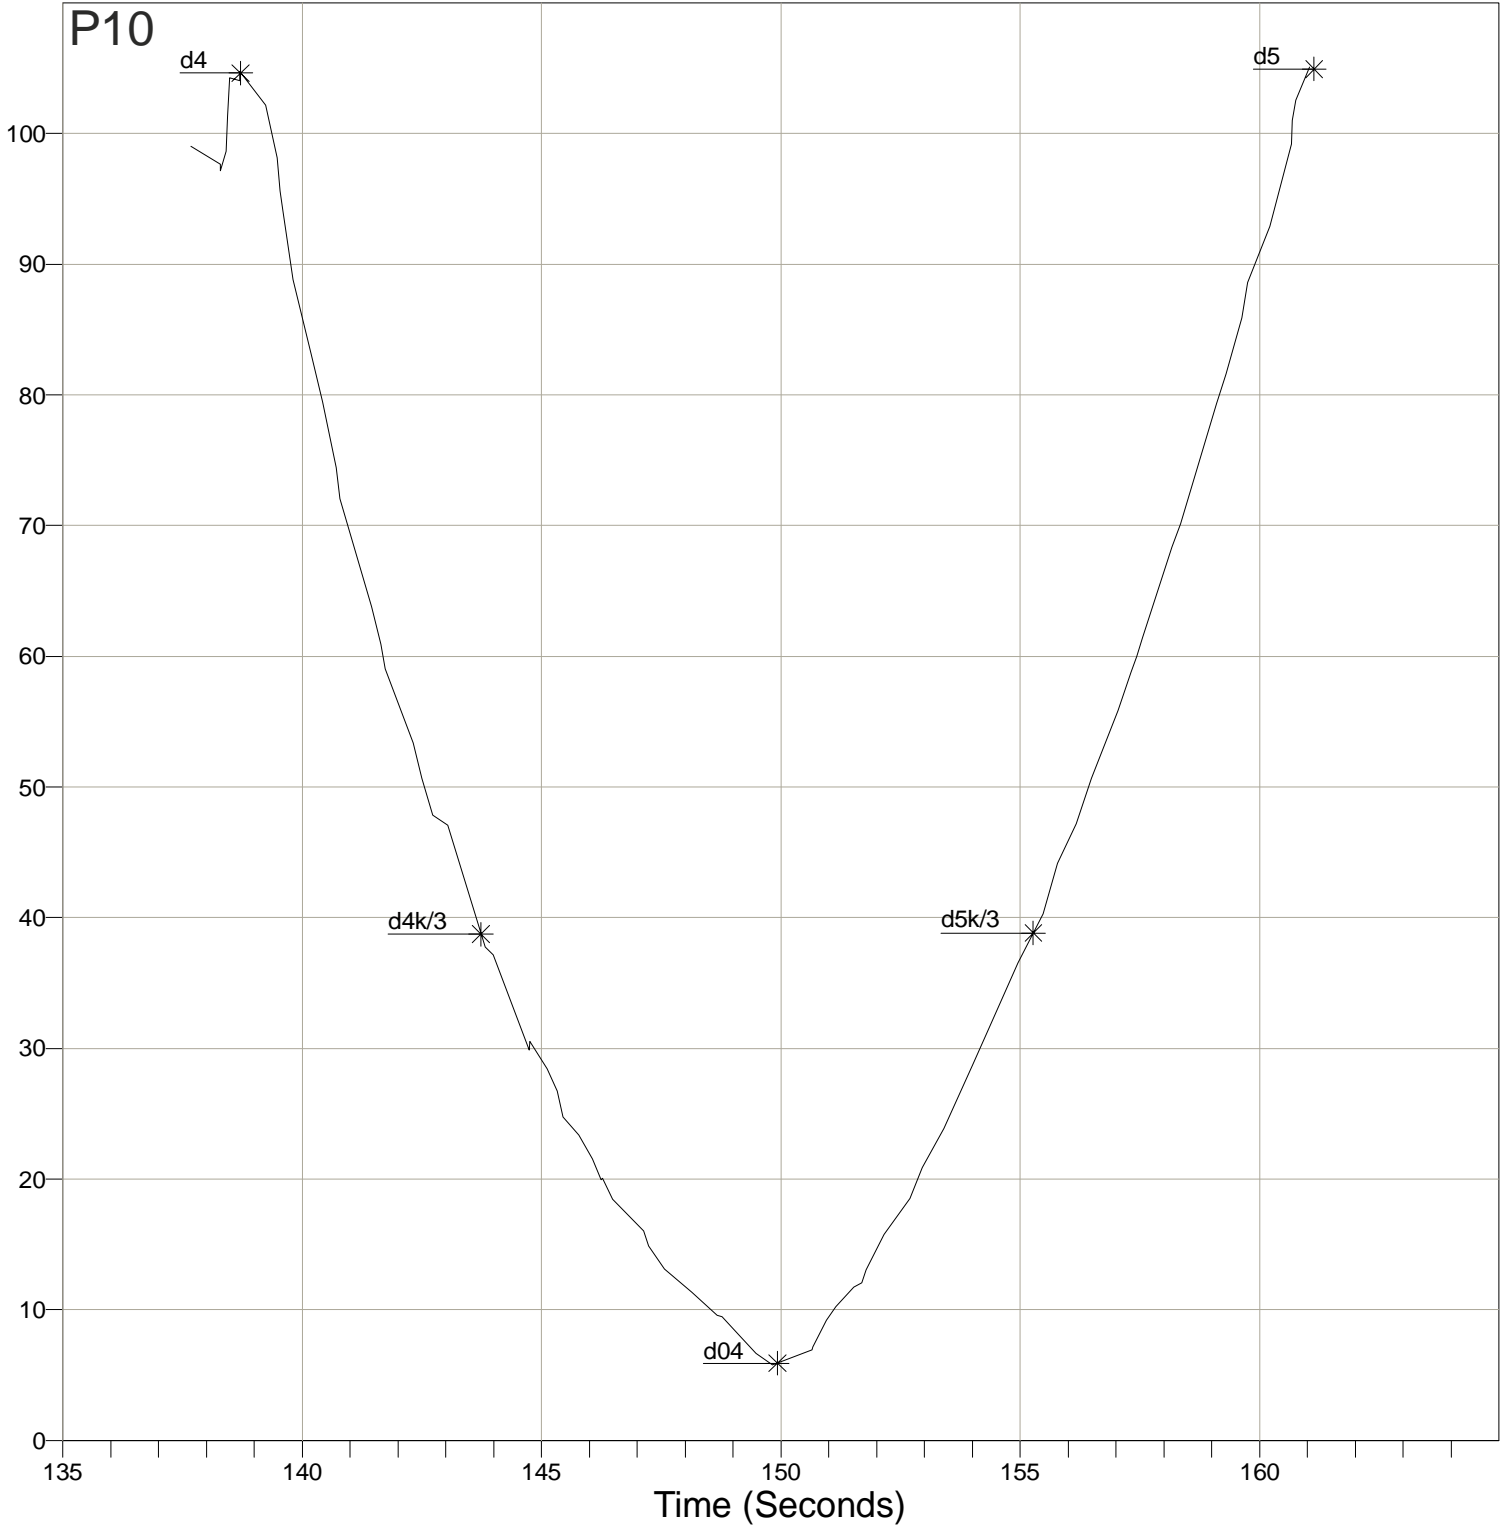



# Load Reaction


Load / 100 sq. mm (N)

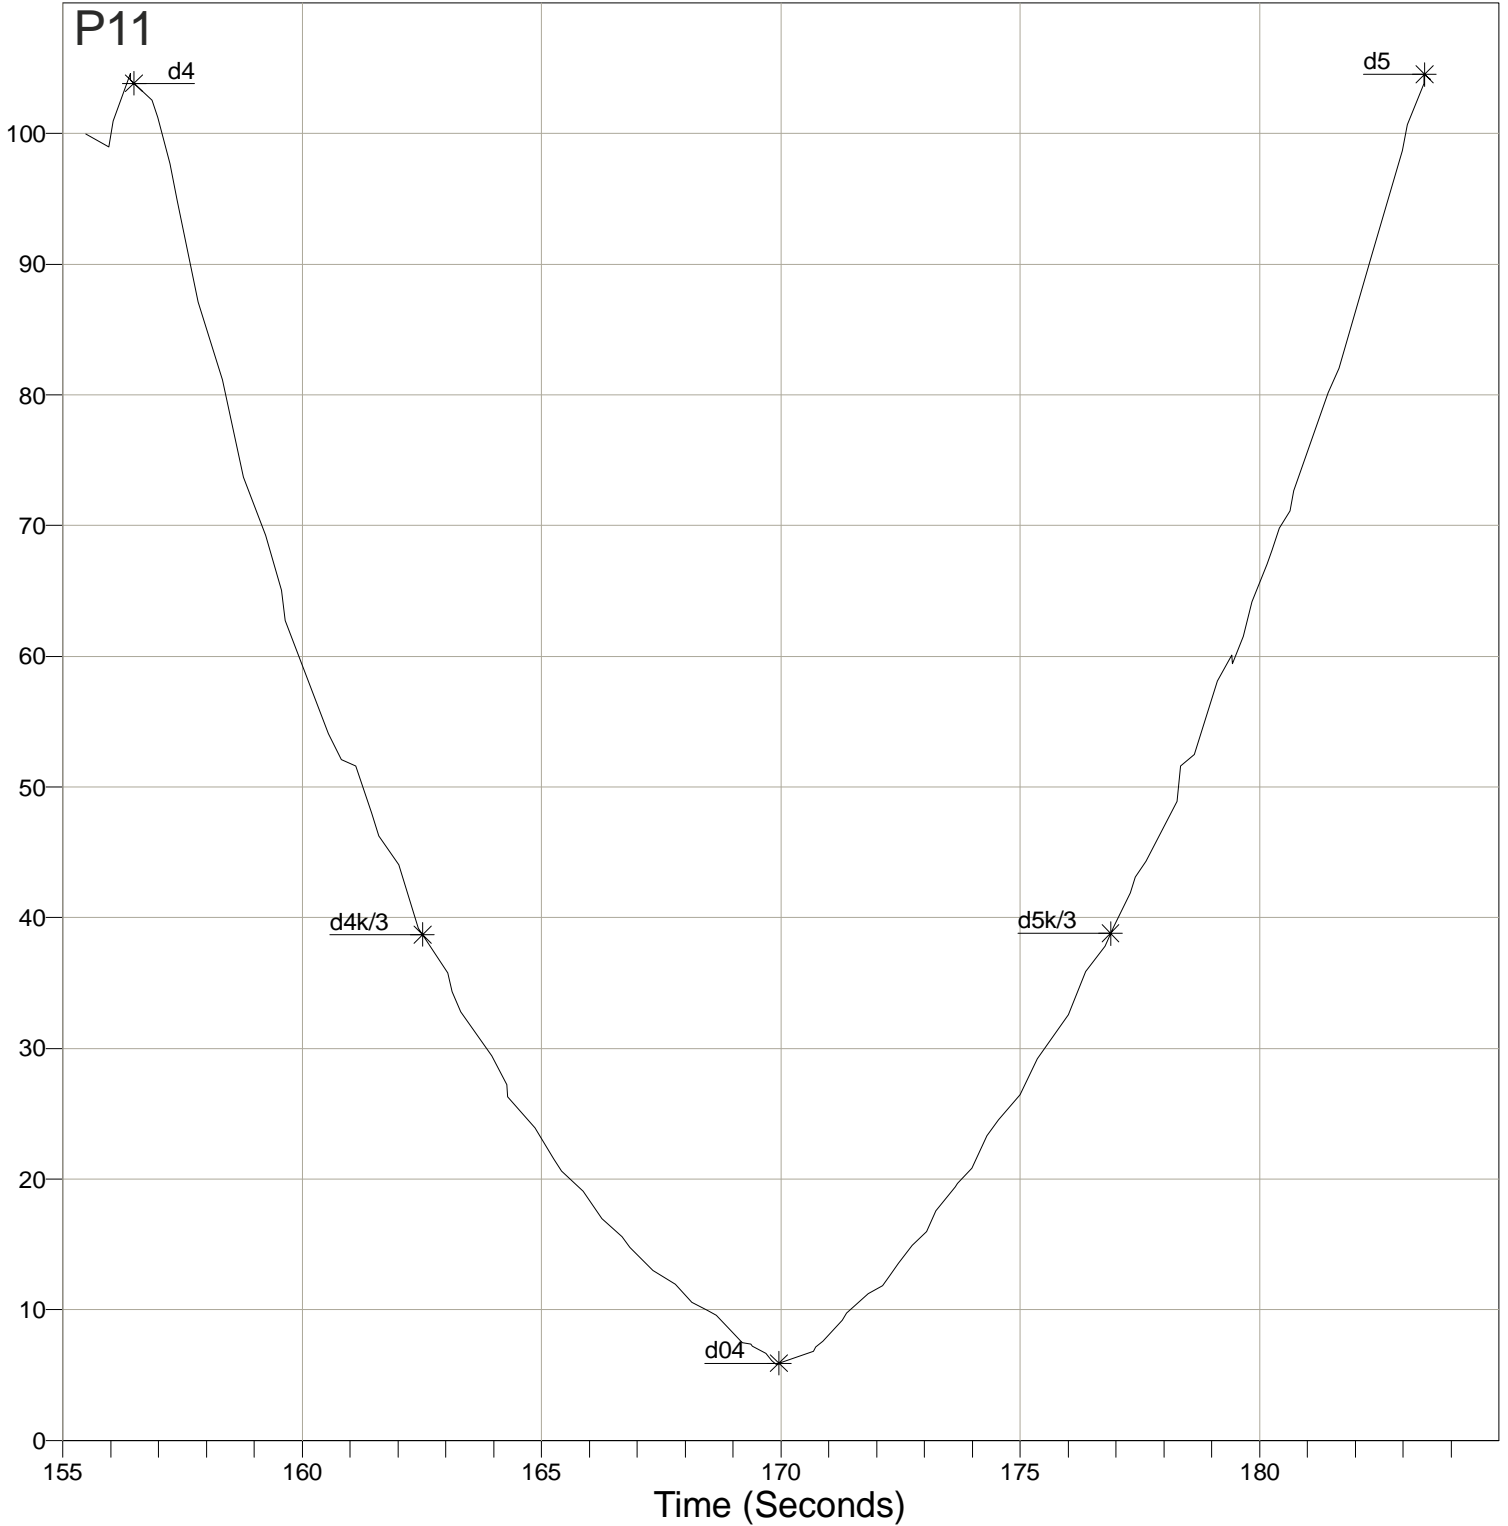



# Load Reaction

Load / 100 sq. mm (N)

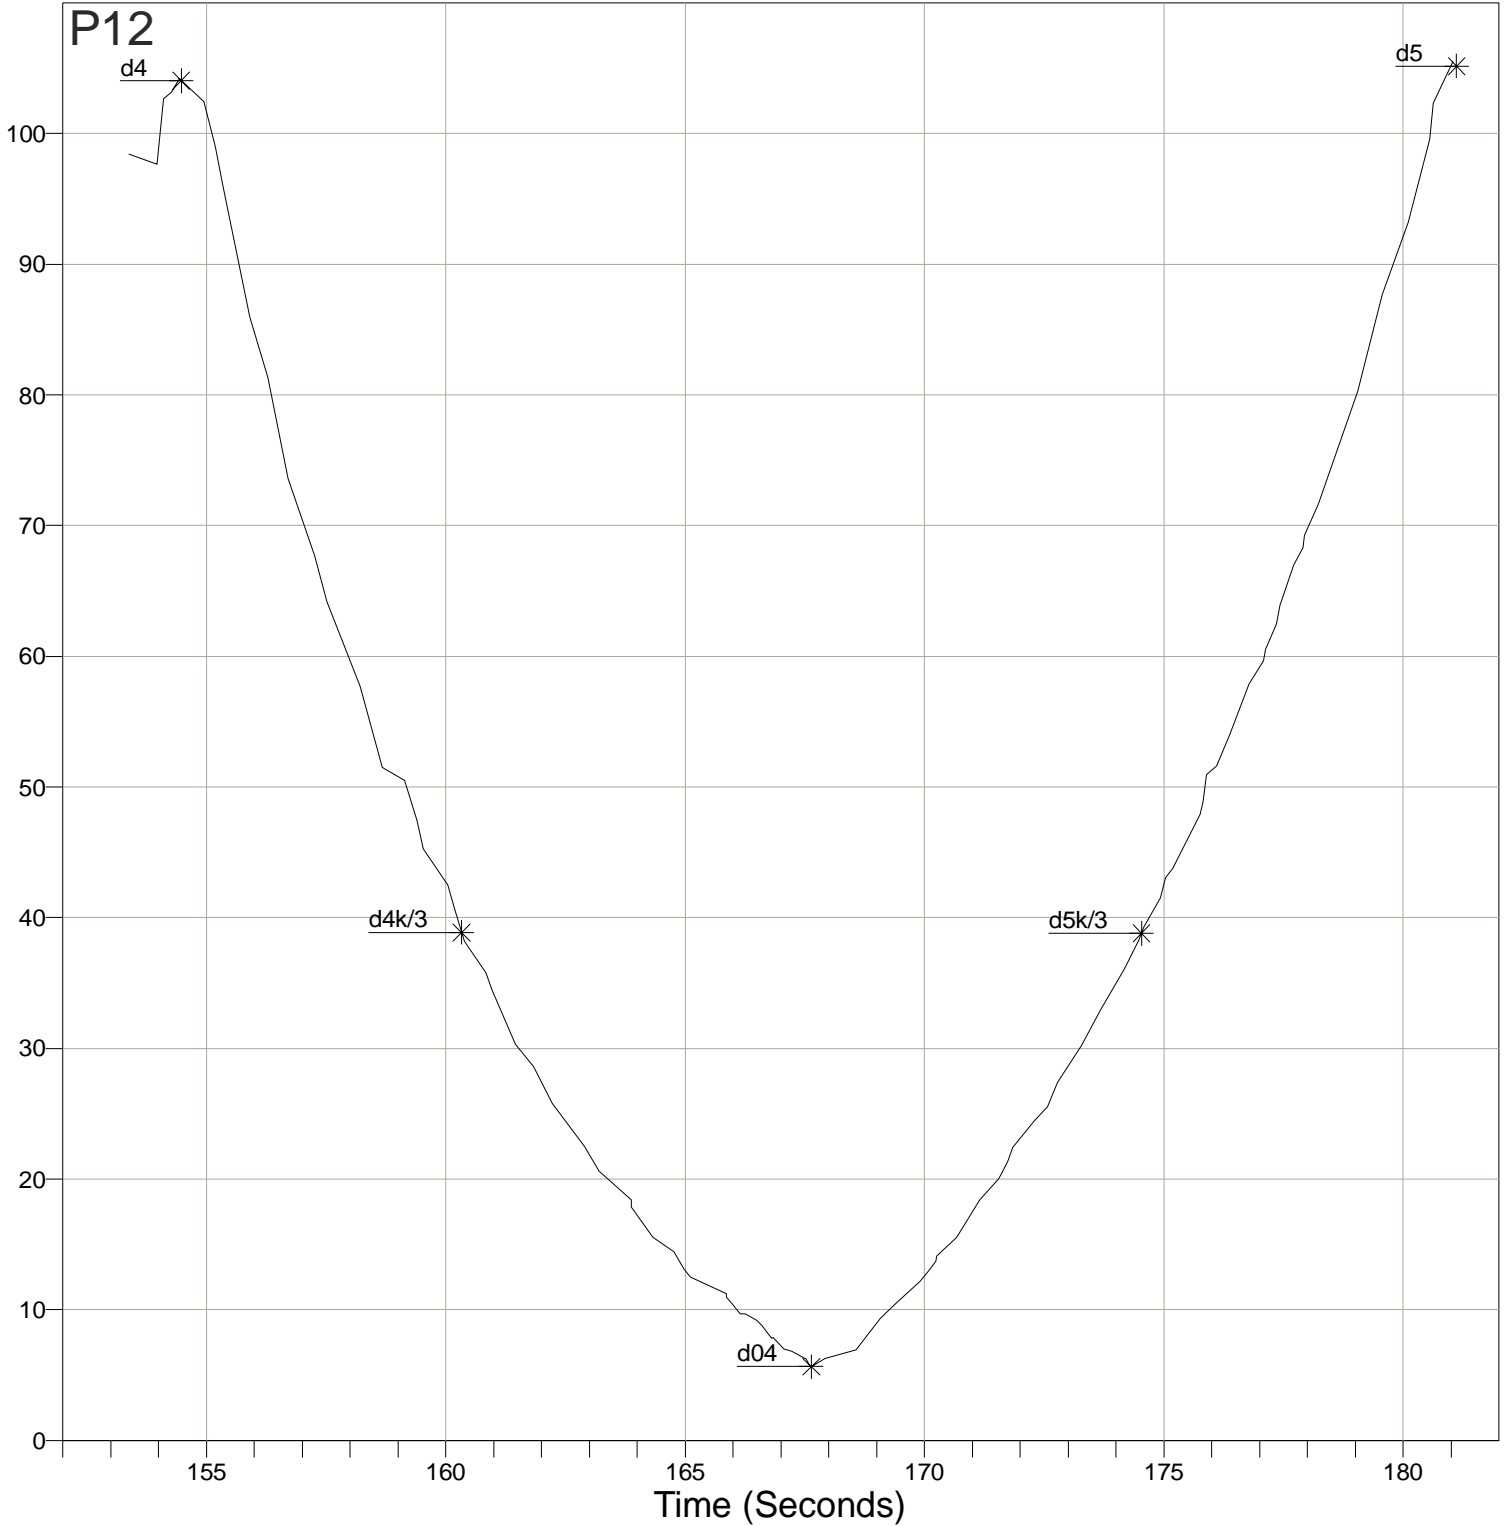




# Load Reaction

Load / 100 sq. mm (N)


P17

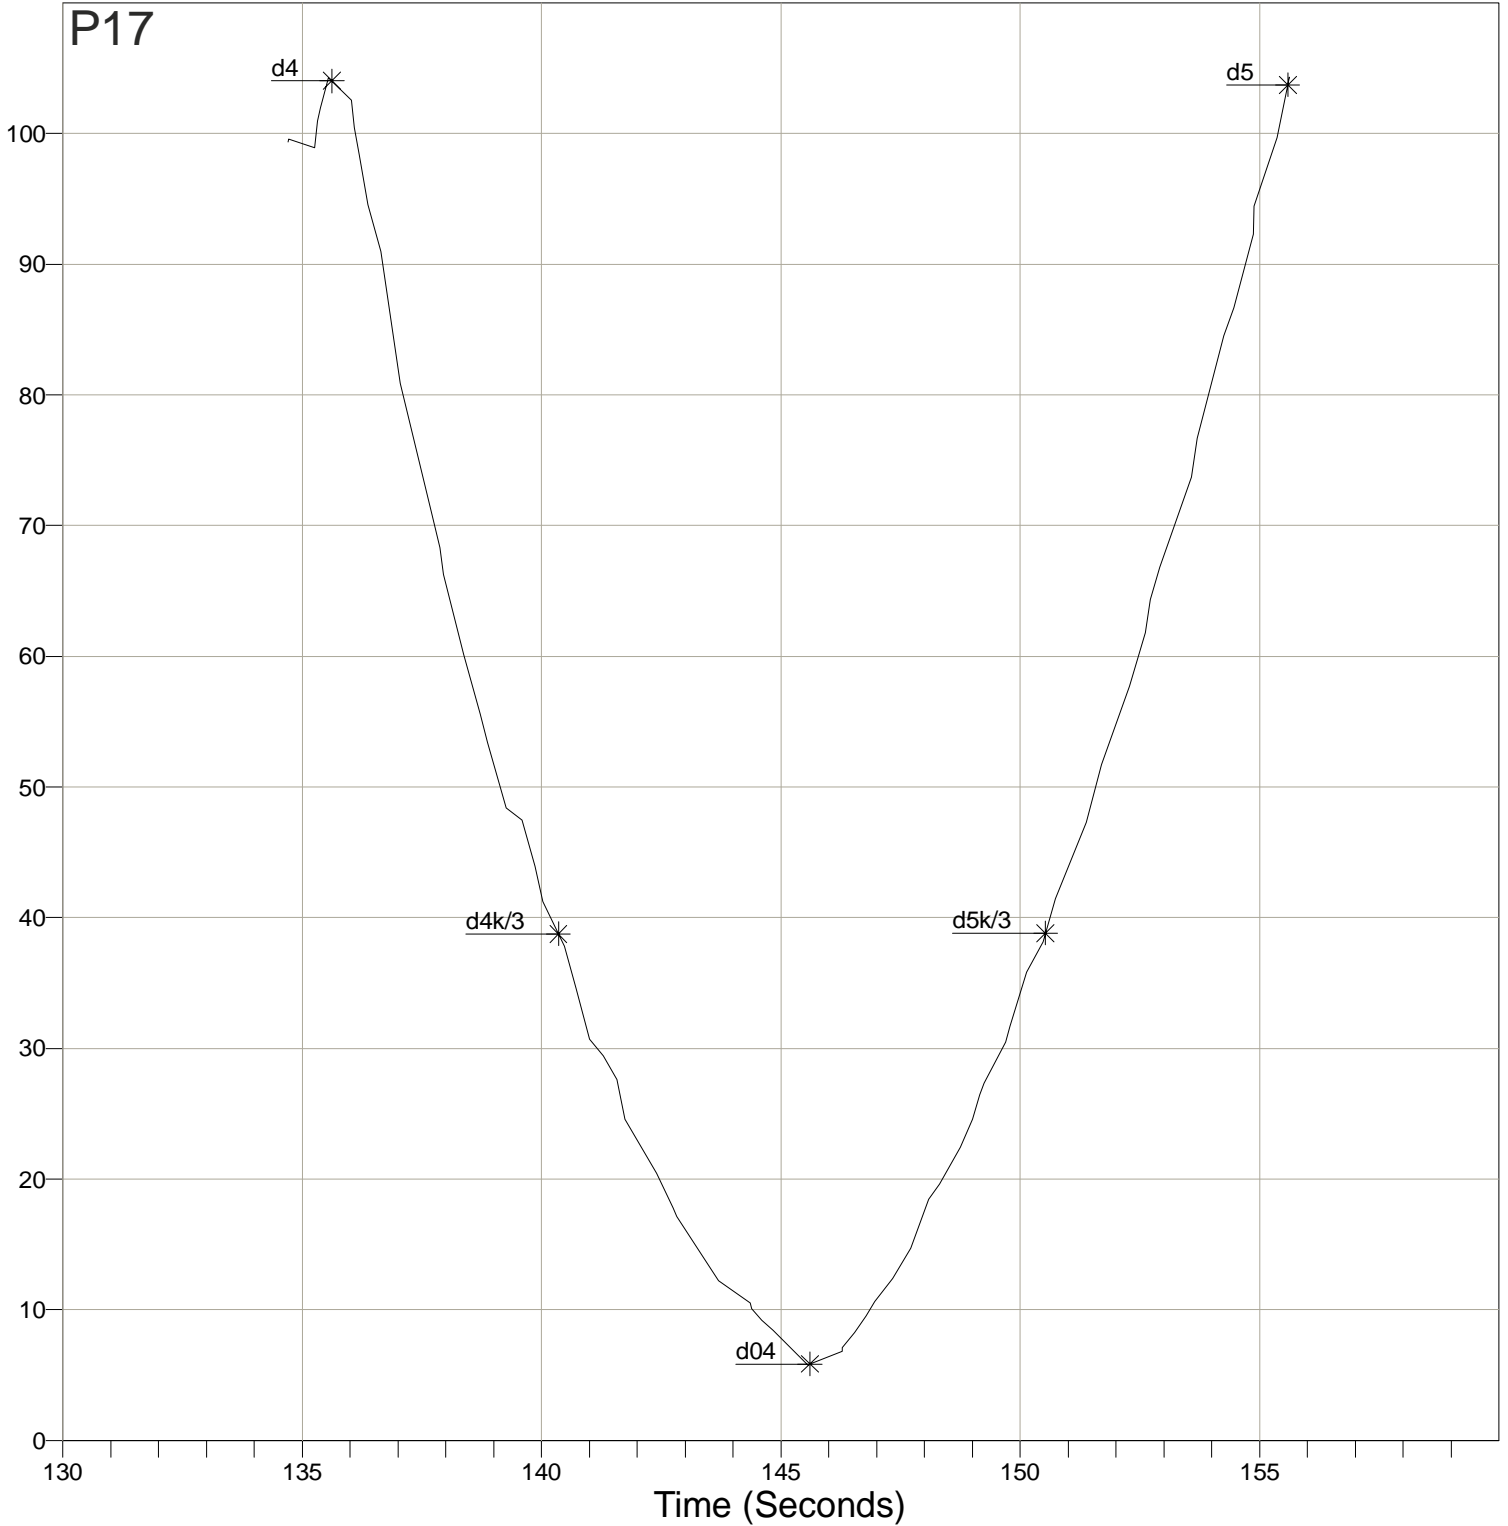



# Load Reaction

Load / 100 sq. mm (N)

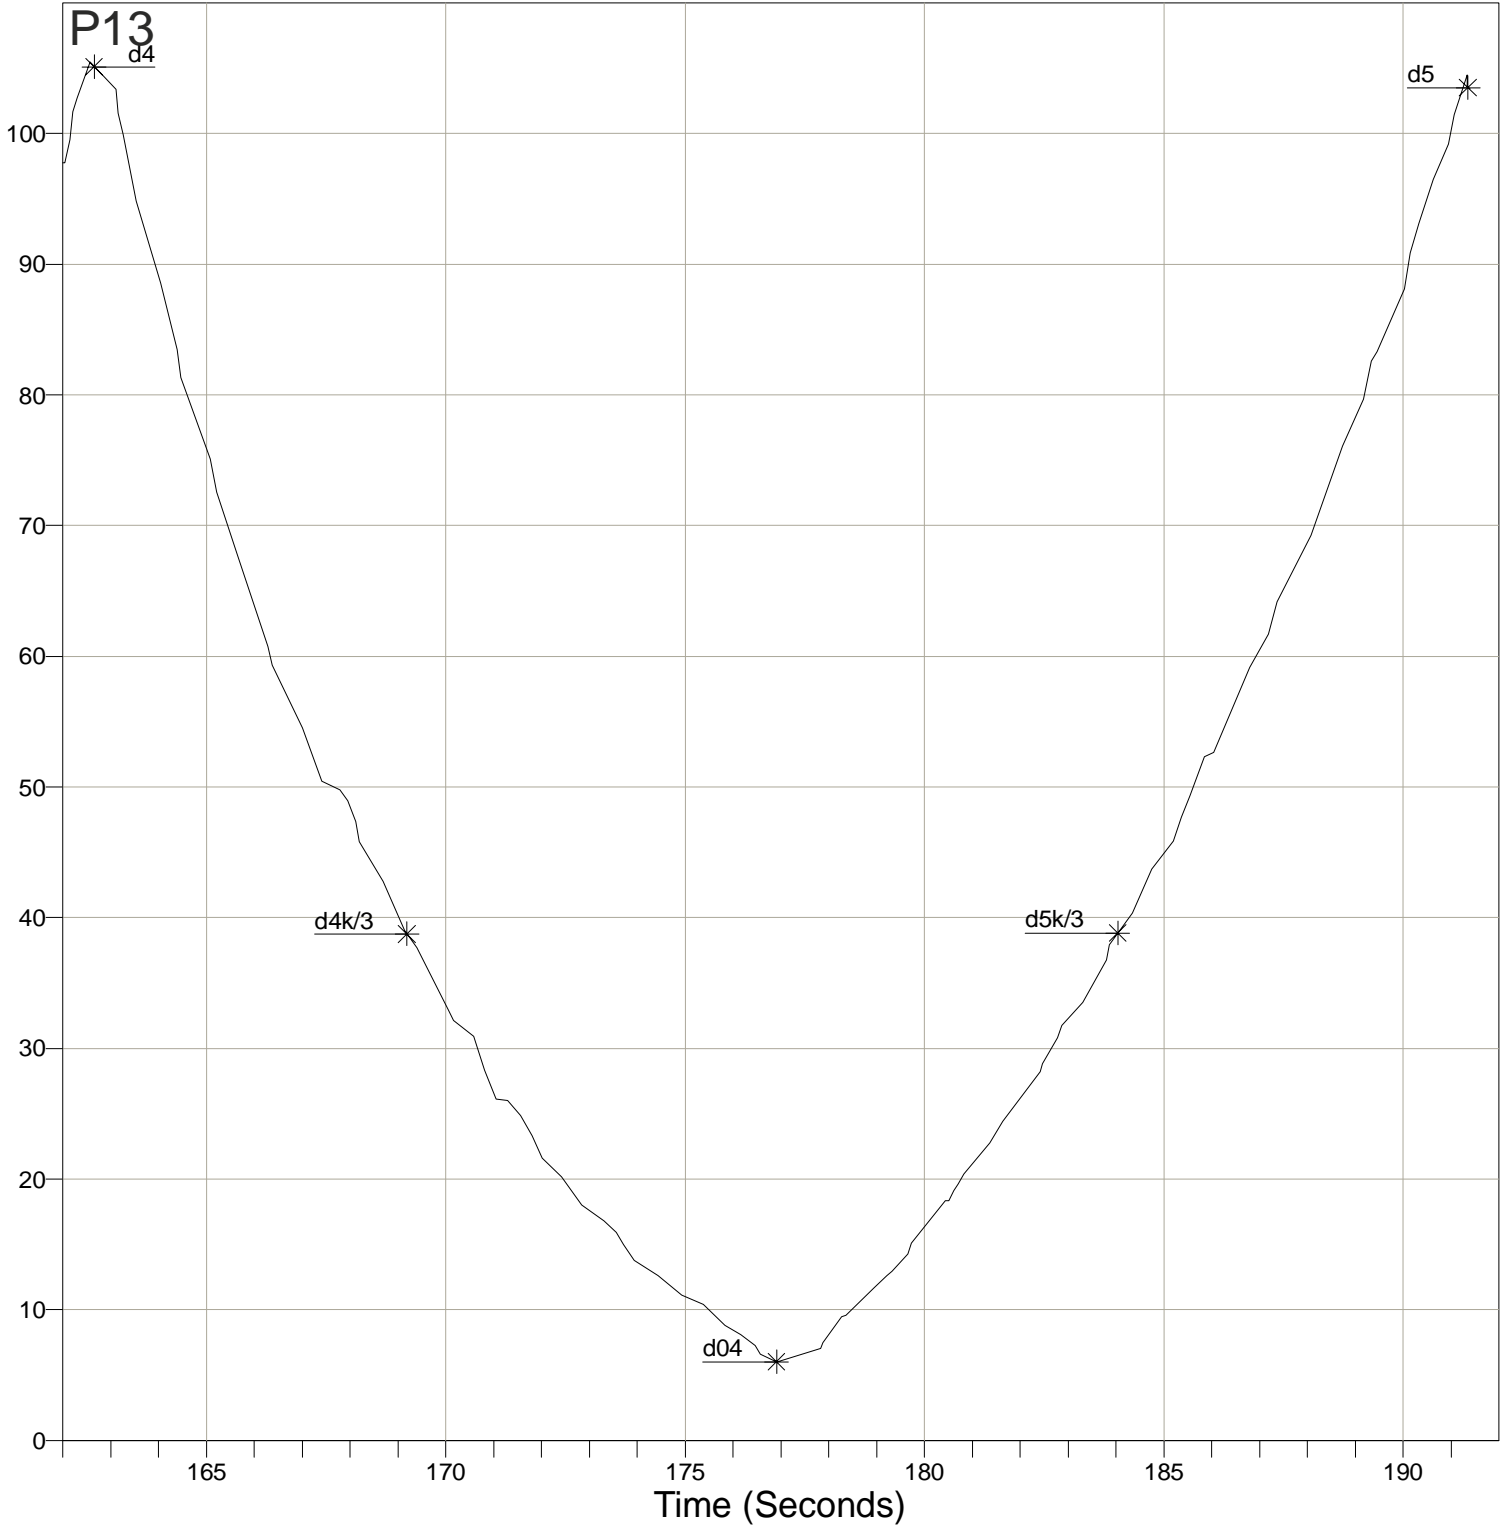





# Load Reaction

Load / 100 sq. mm (N)

