


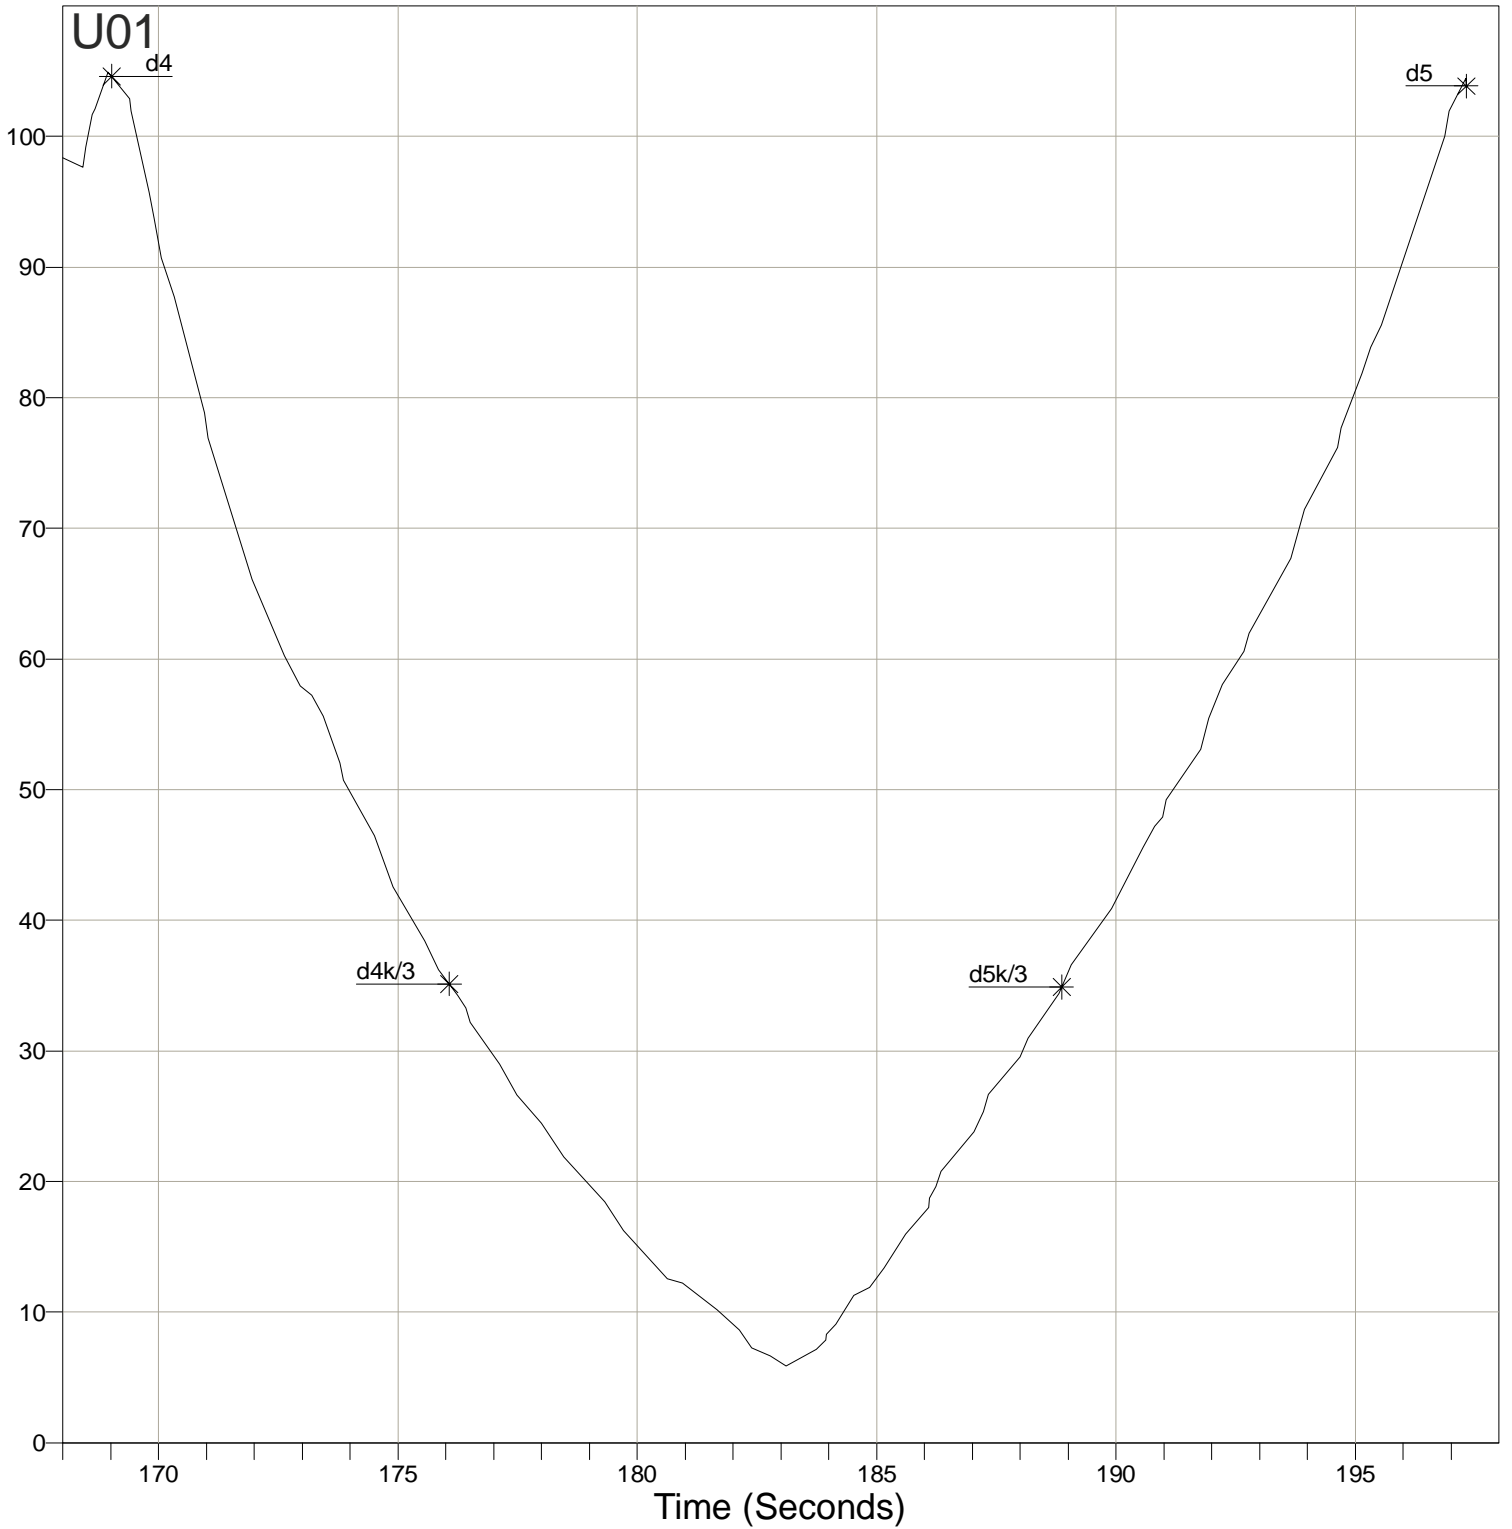

Load Reaction


Load / 100 sq. mm (N)





Load Reaction


Load / 100 sq. mm (N)

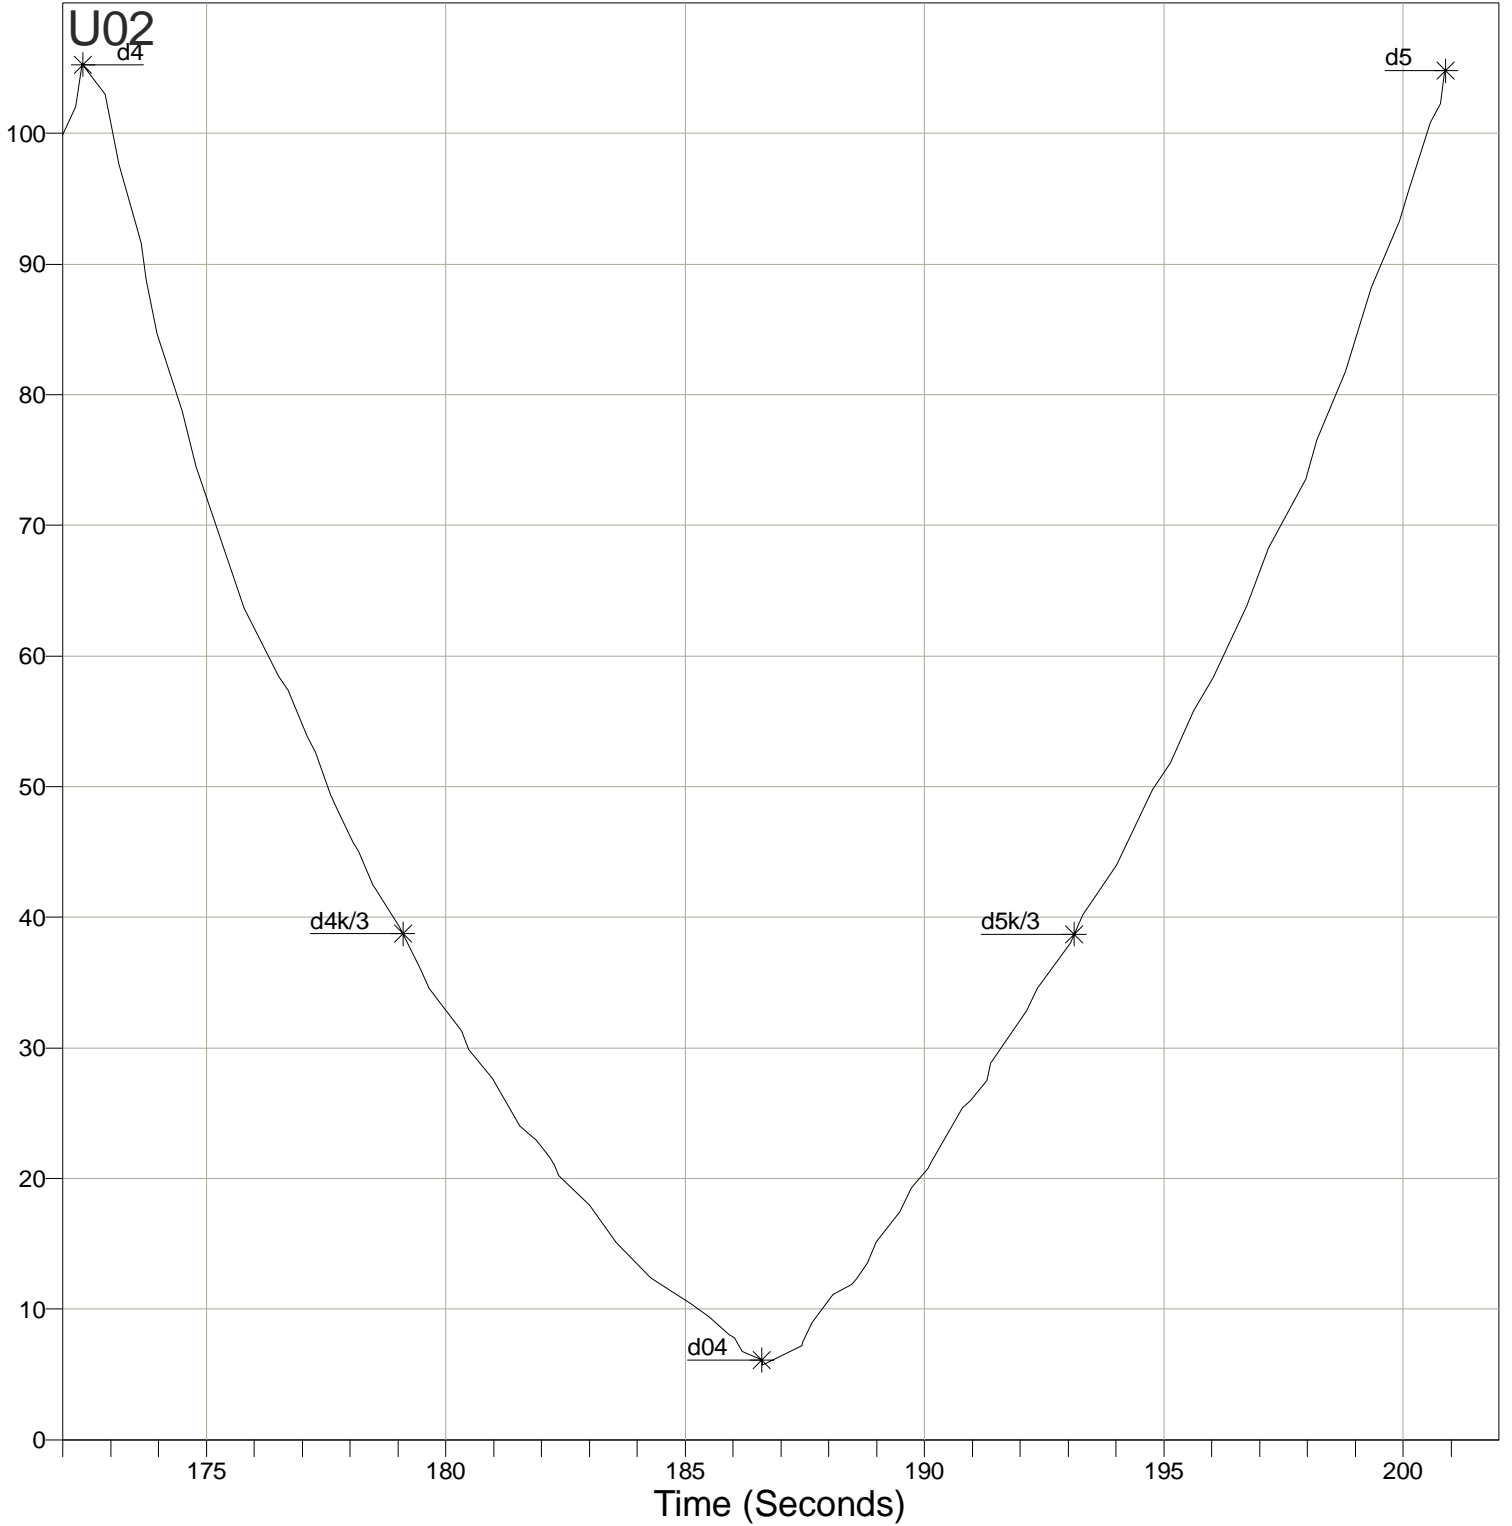



Load Reaction


Load / 100 sq. mm (N)

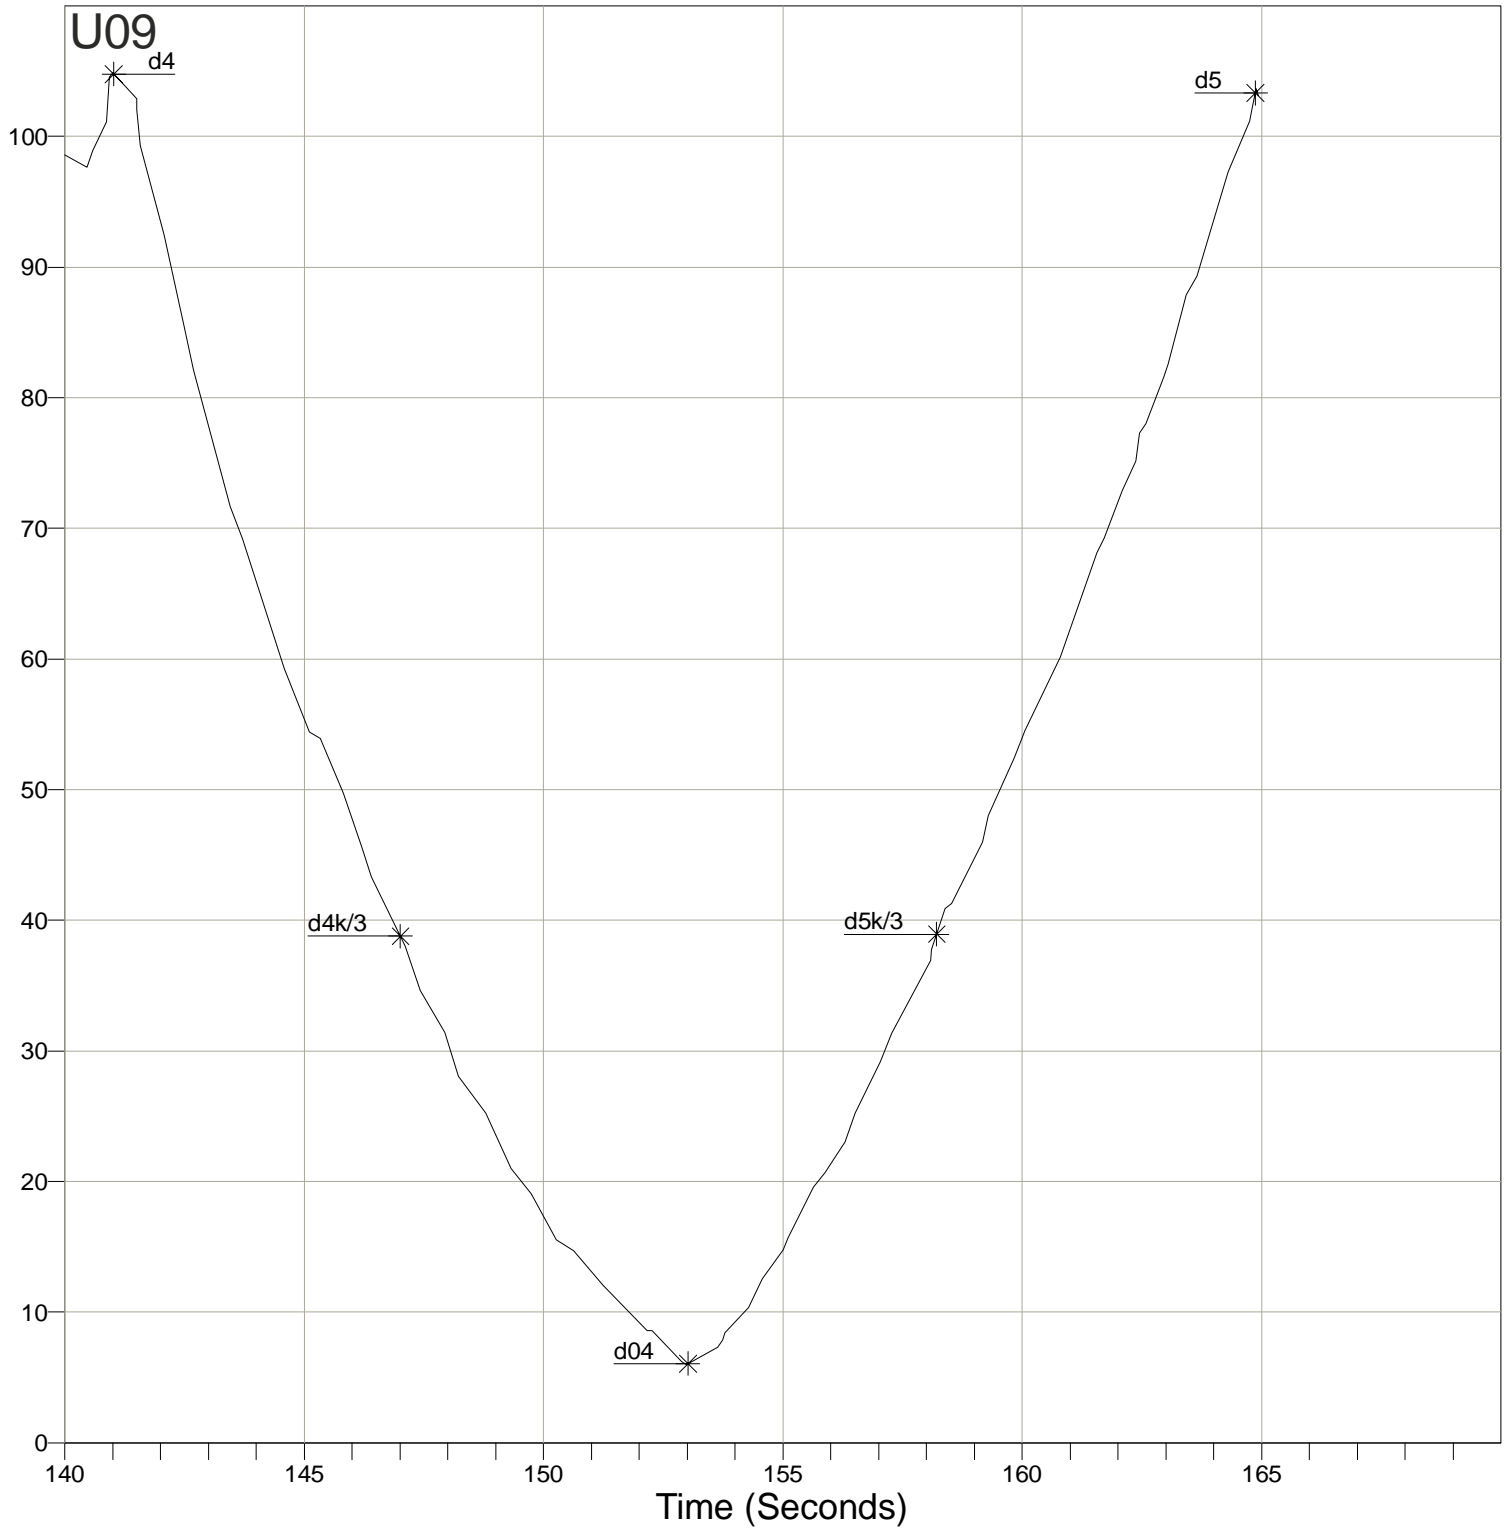



Load Reaction


Load / 100 sq. mm (N)

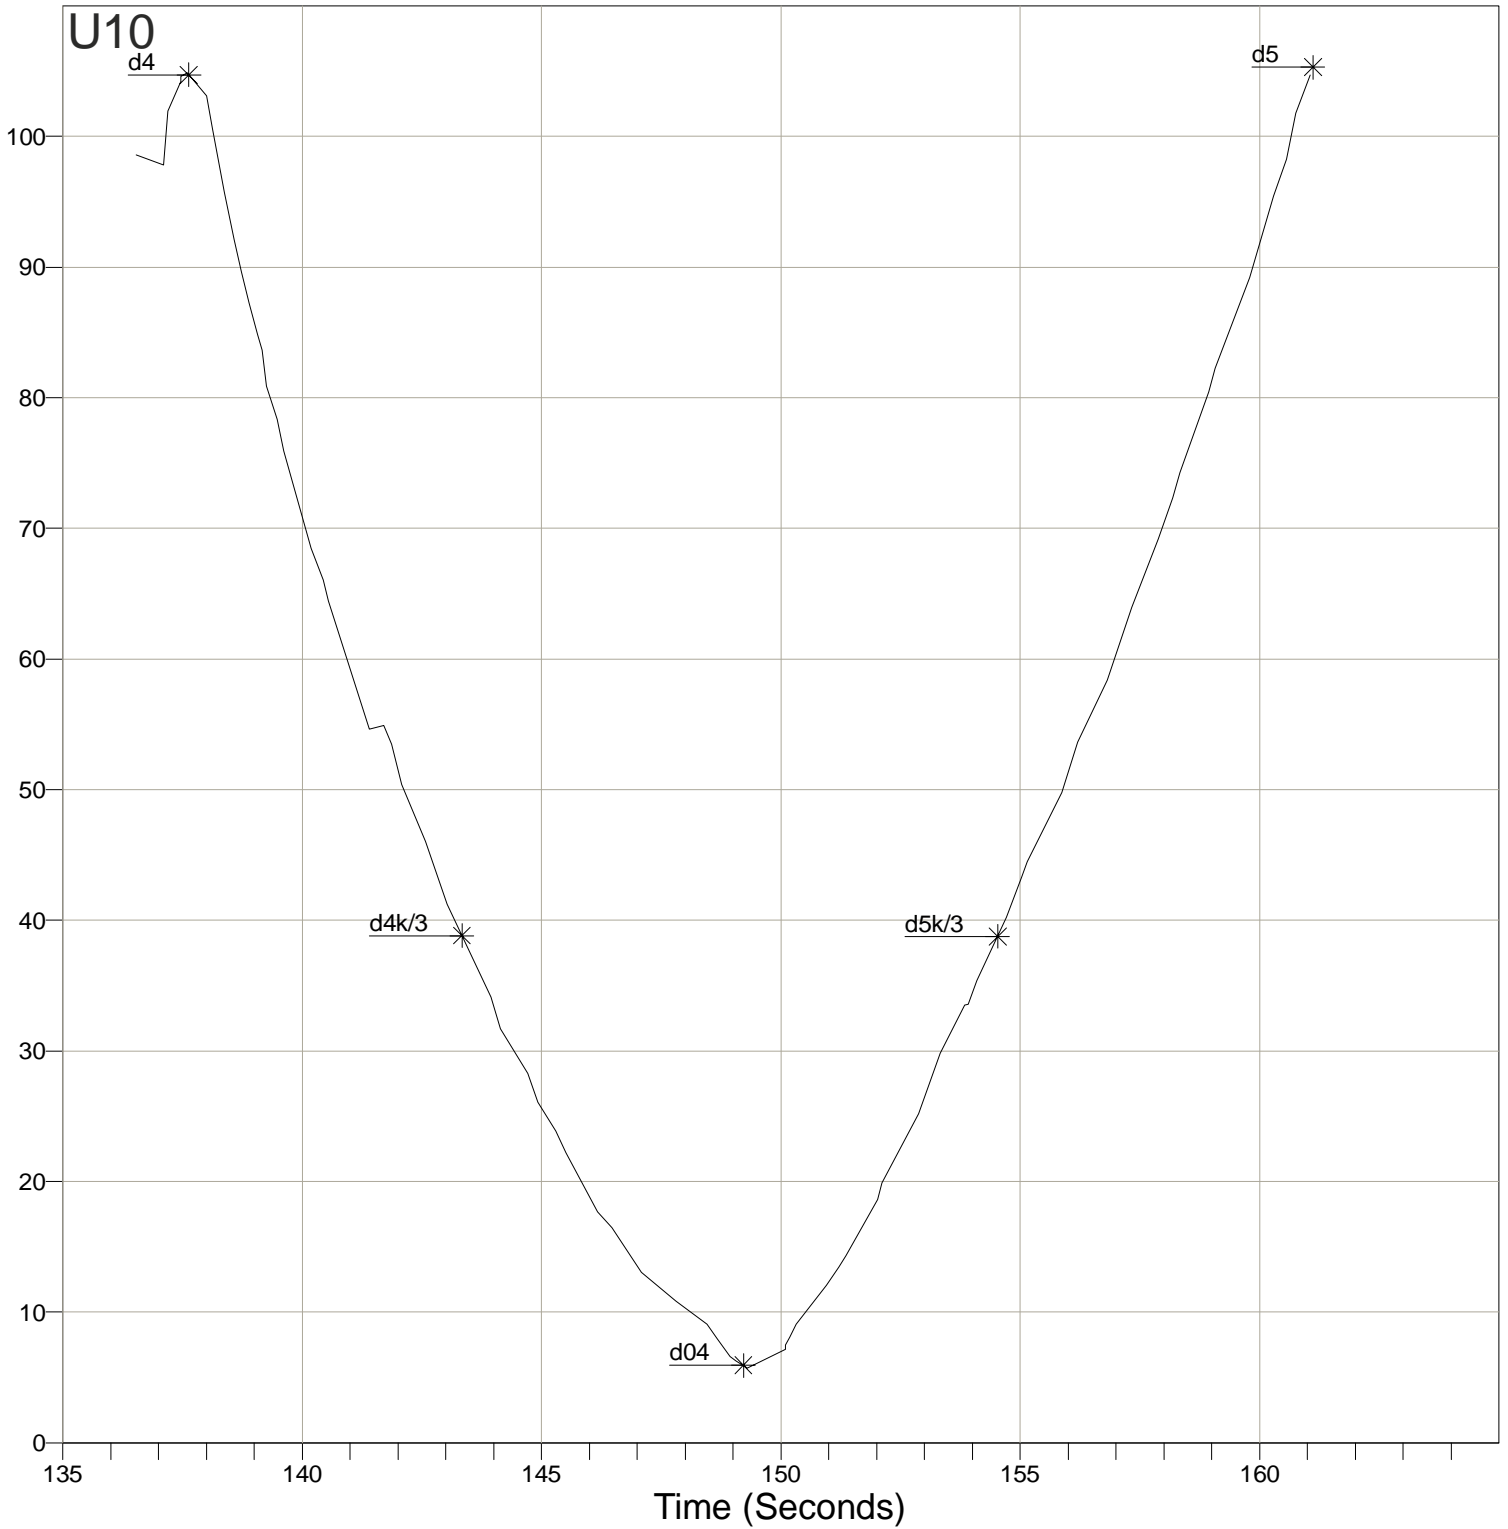



Load Reaction


Load / 100 sq. mm (N)

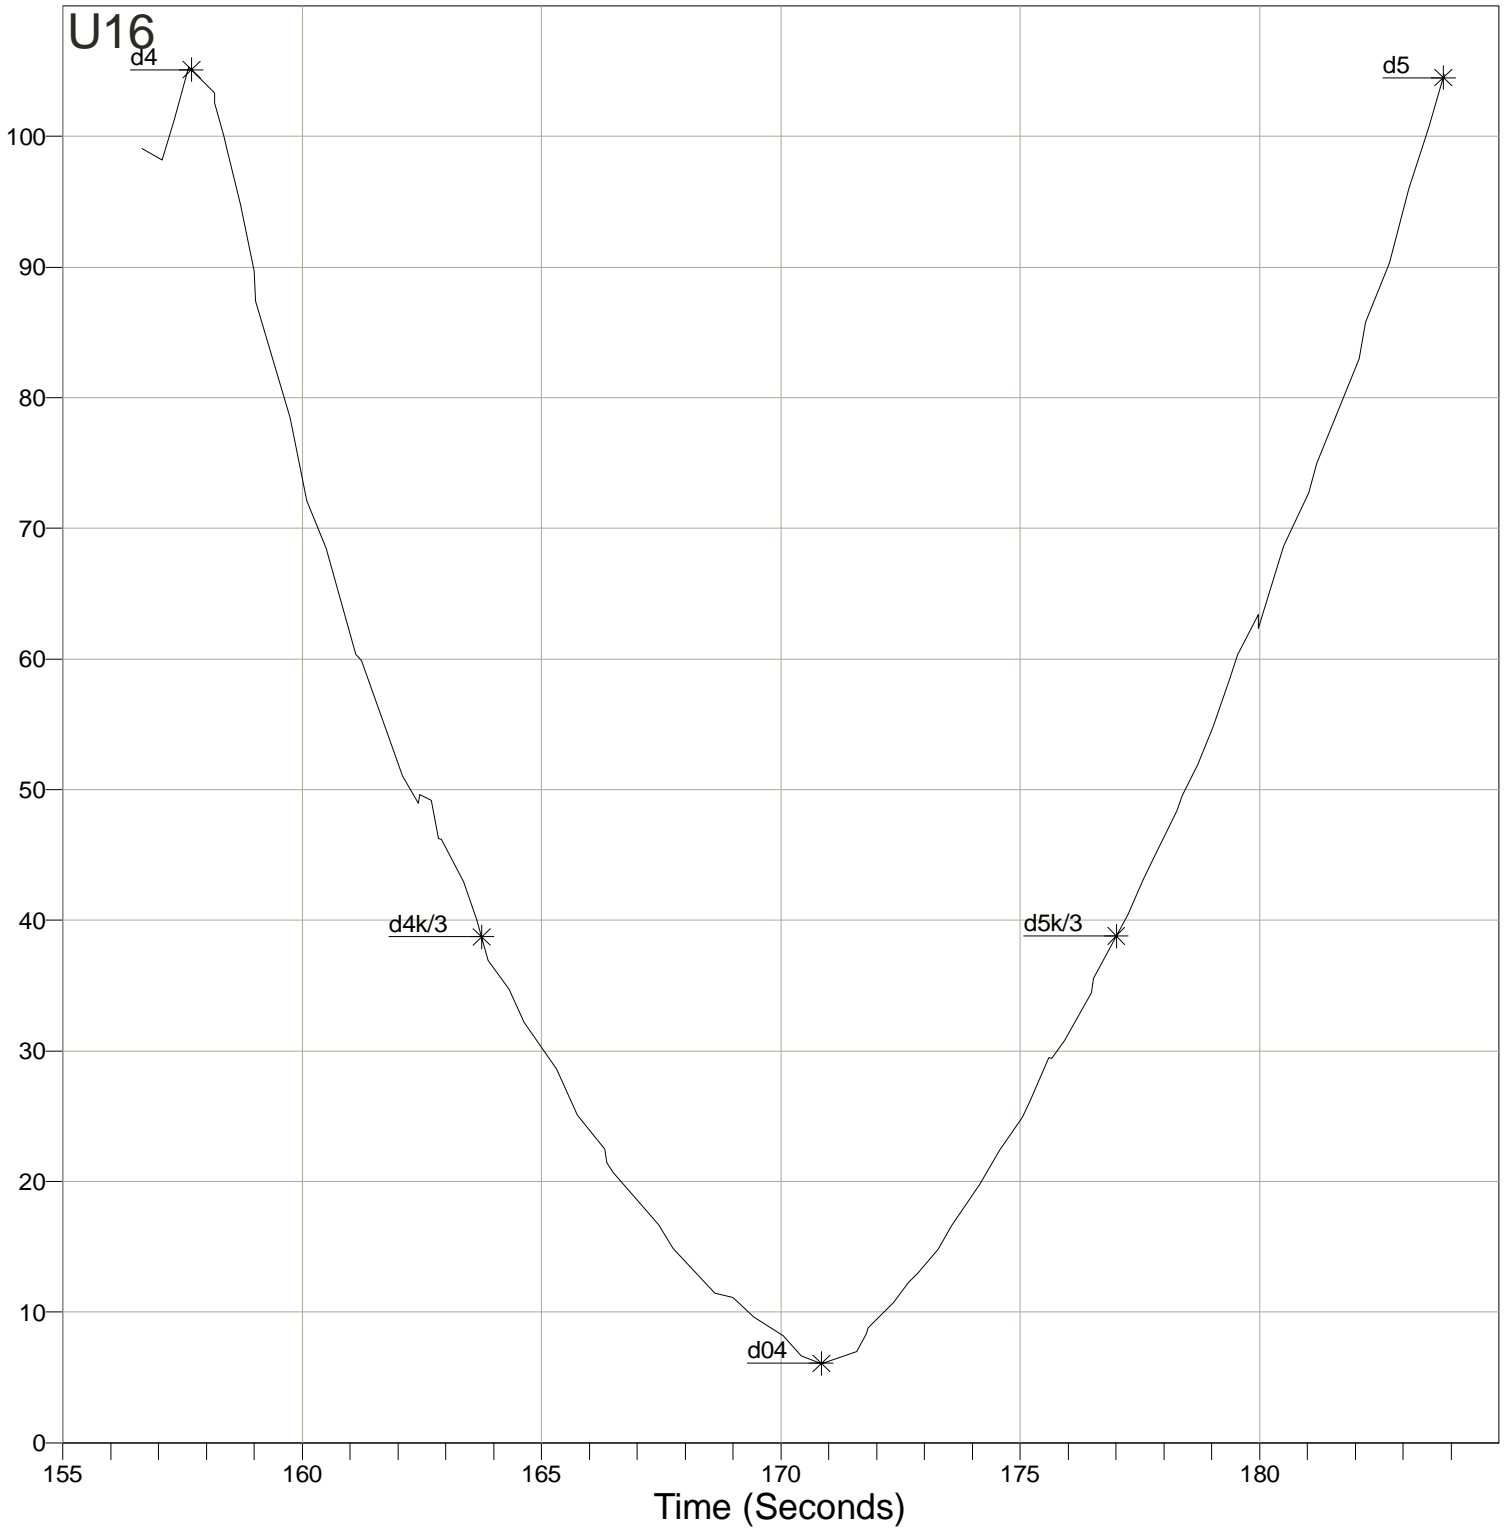



Load Reaction


Load / 100 sq. mm (N)

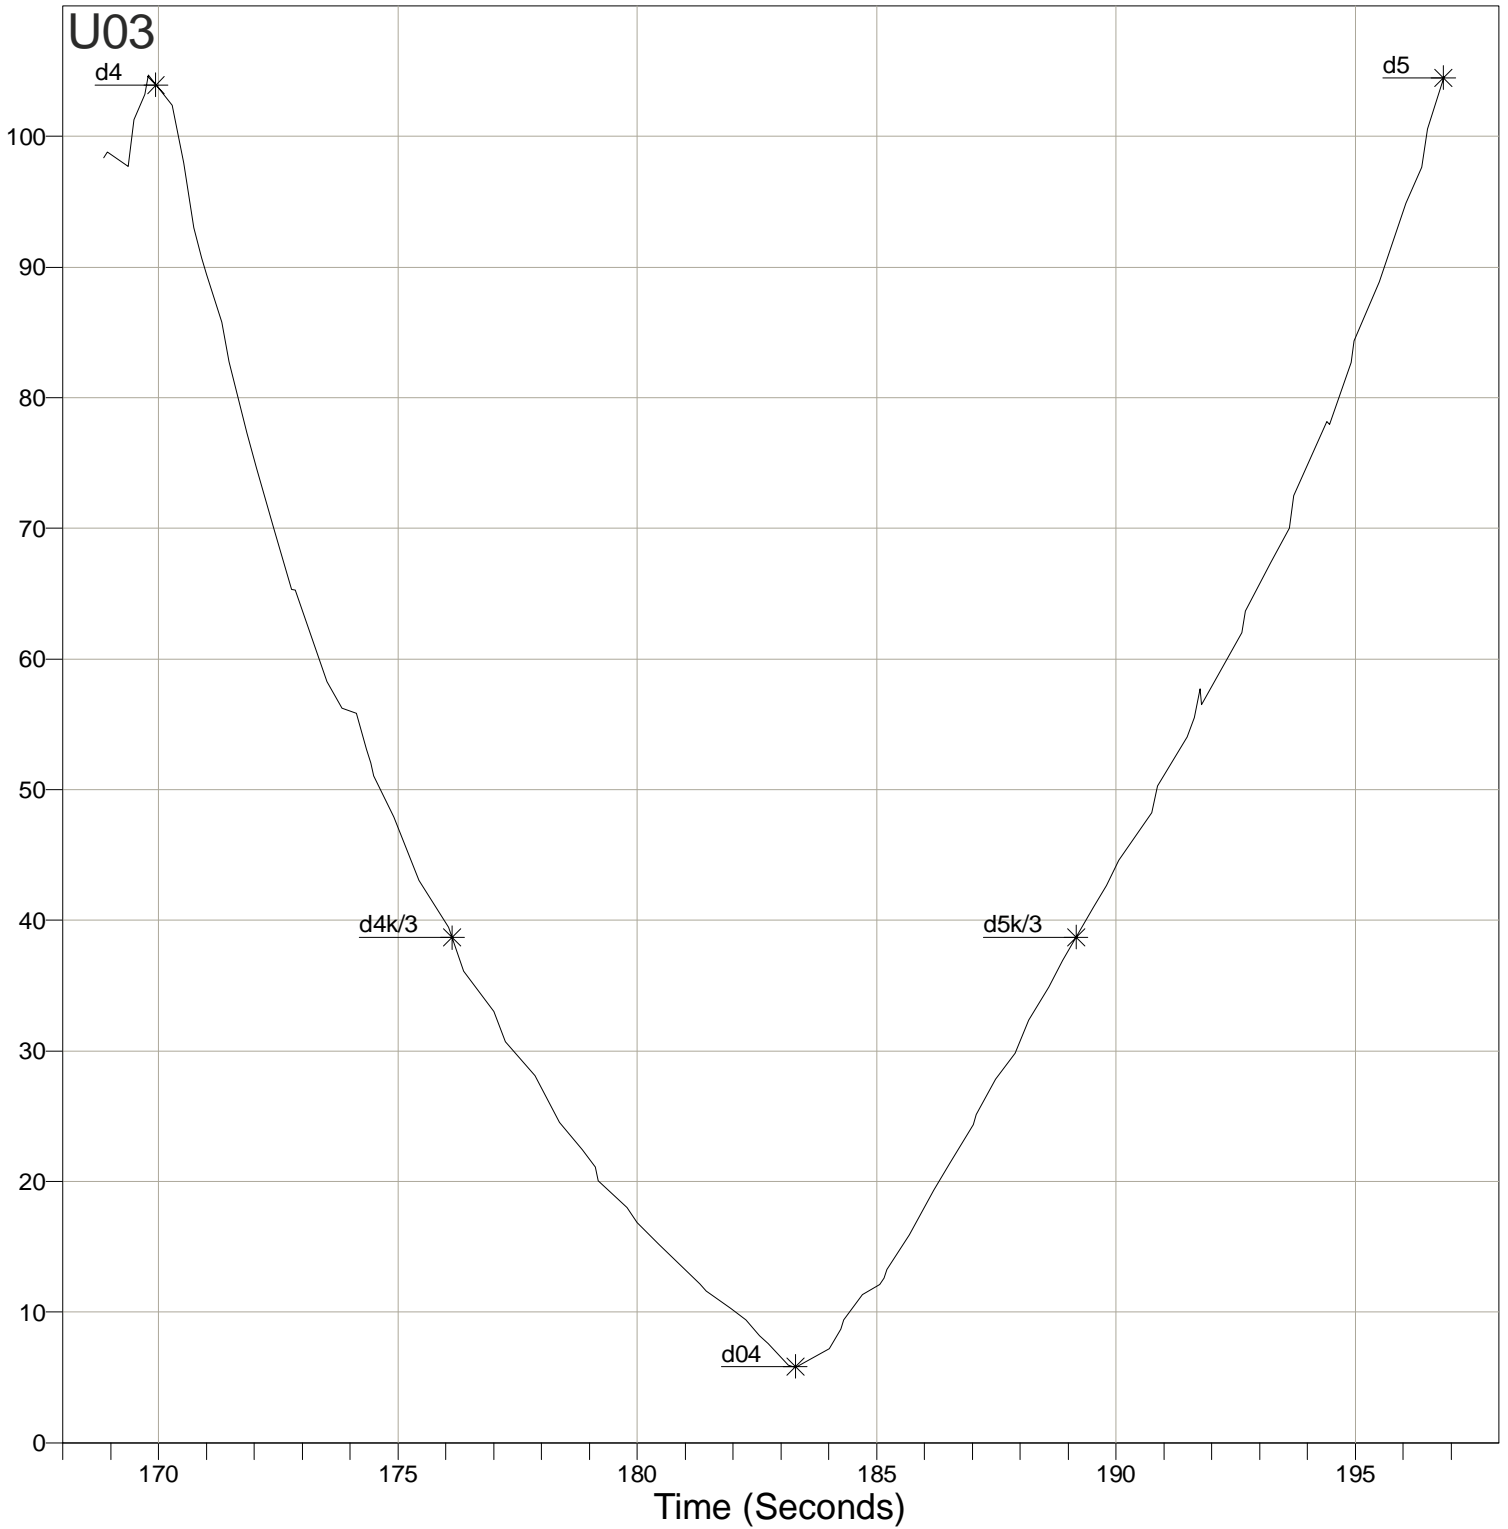



Load Reaction


Load / 100 sq. mm (N)

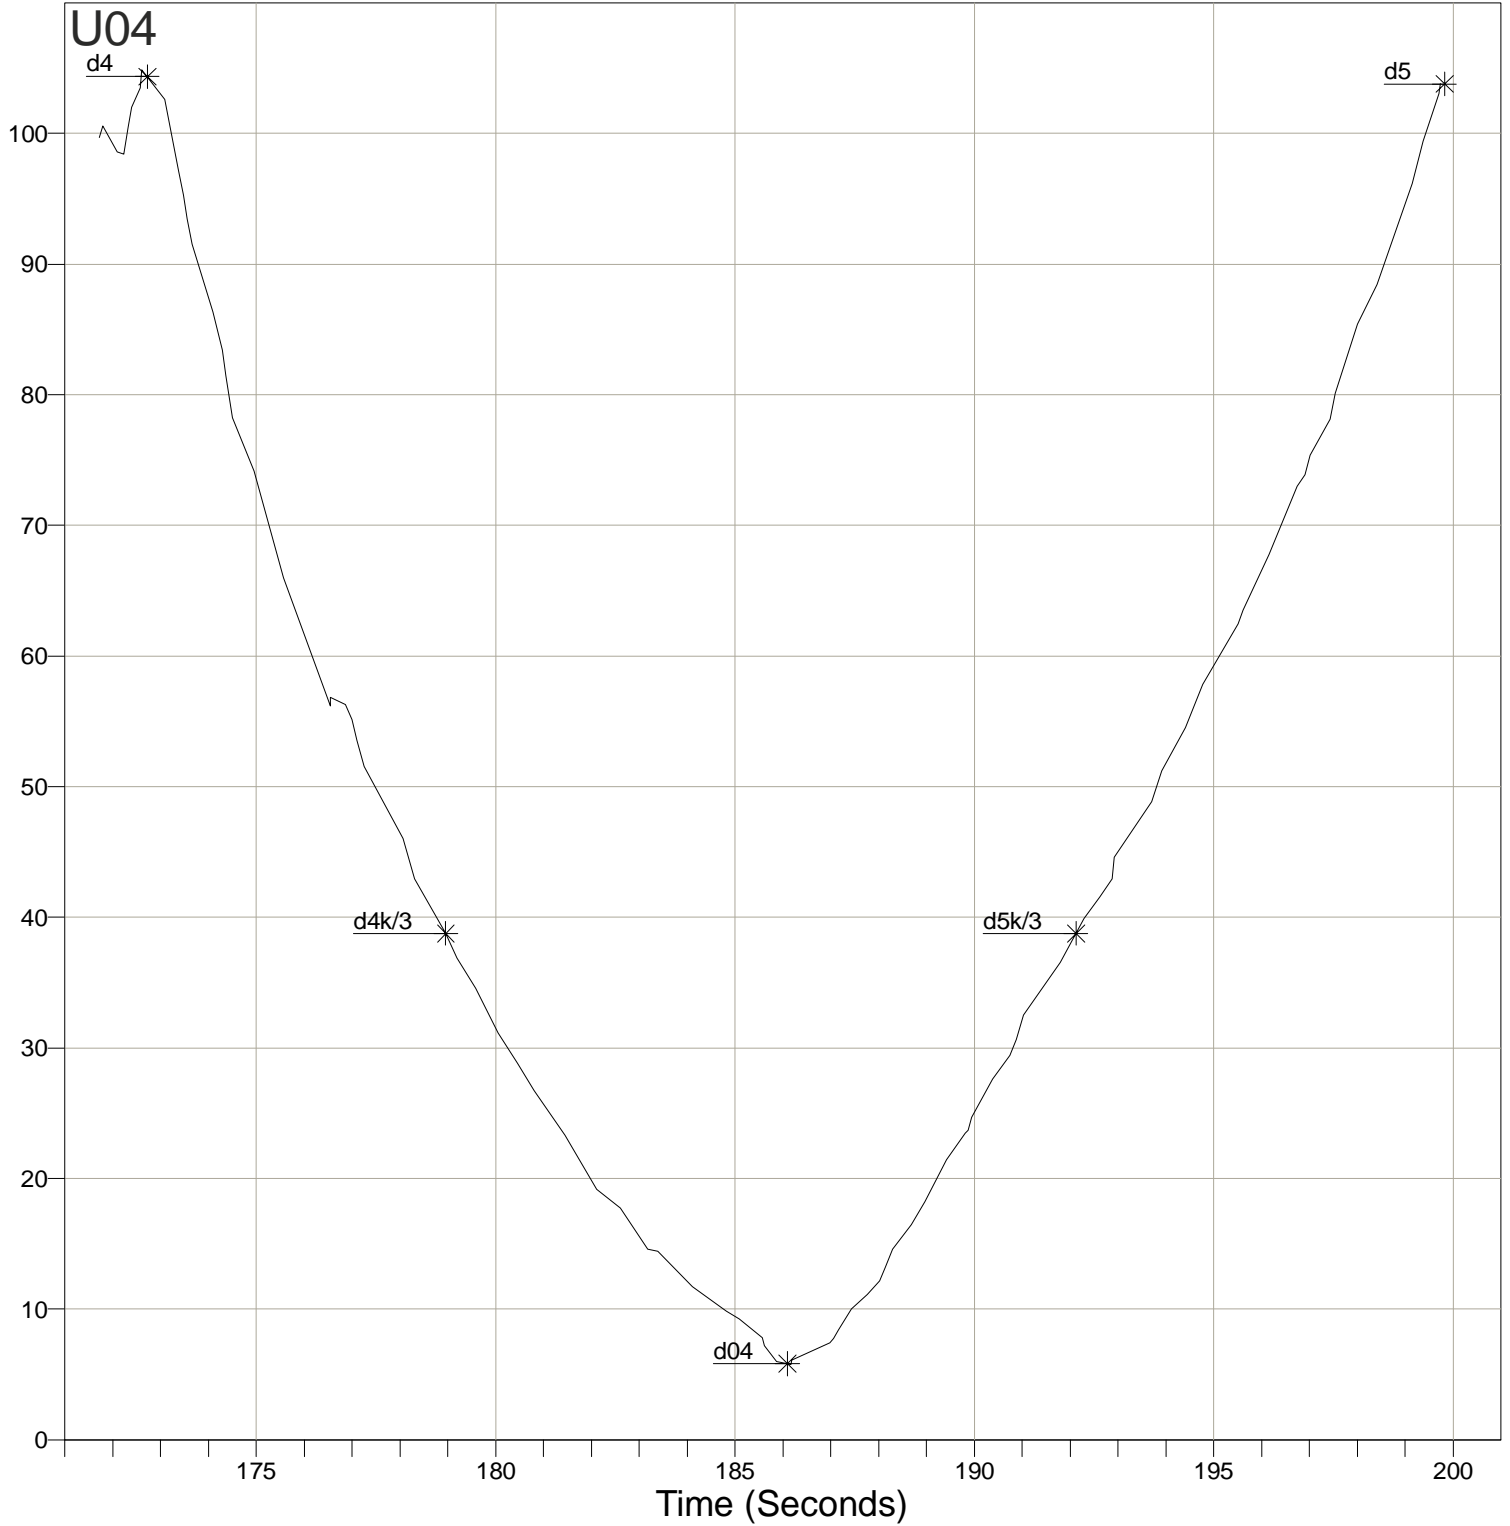



Load Reaction


Load / 100 sq. mm (N)

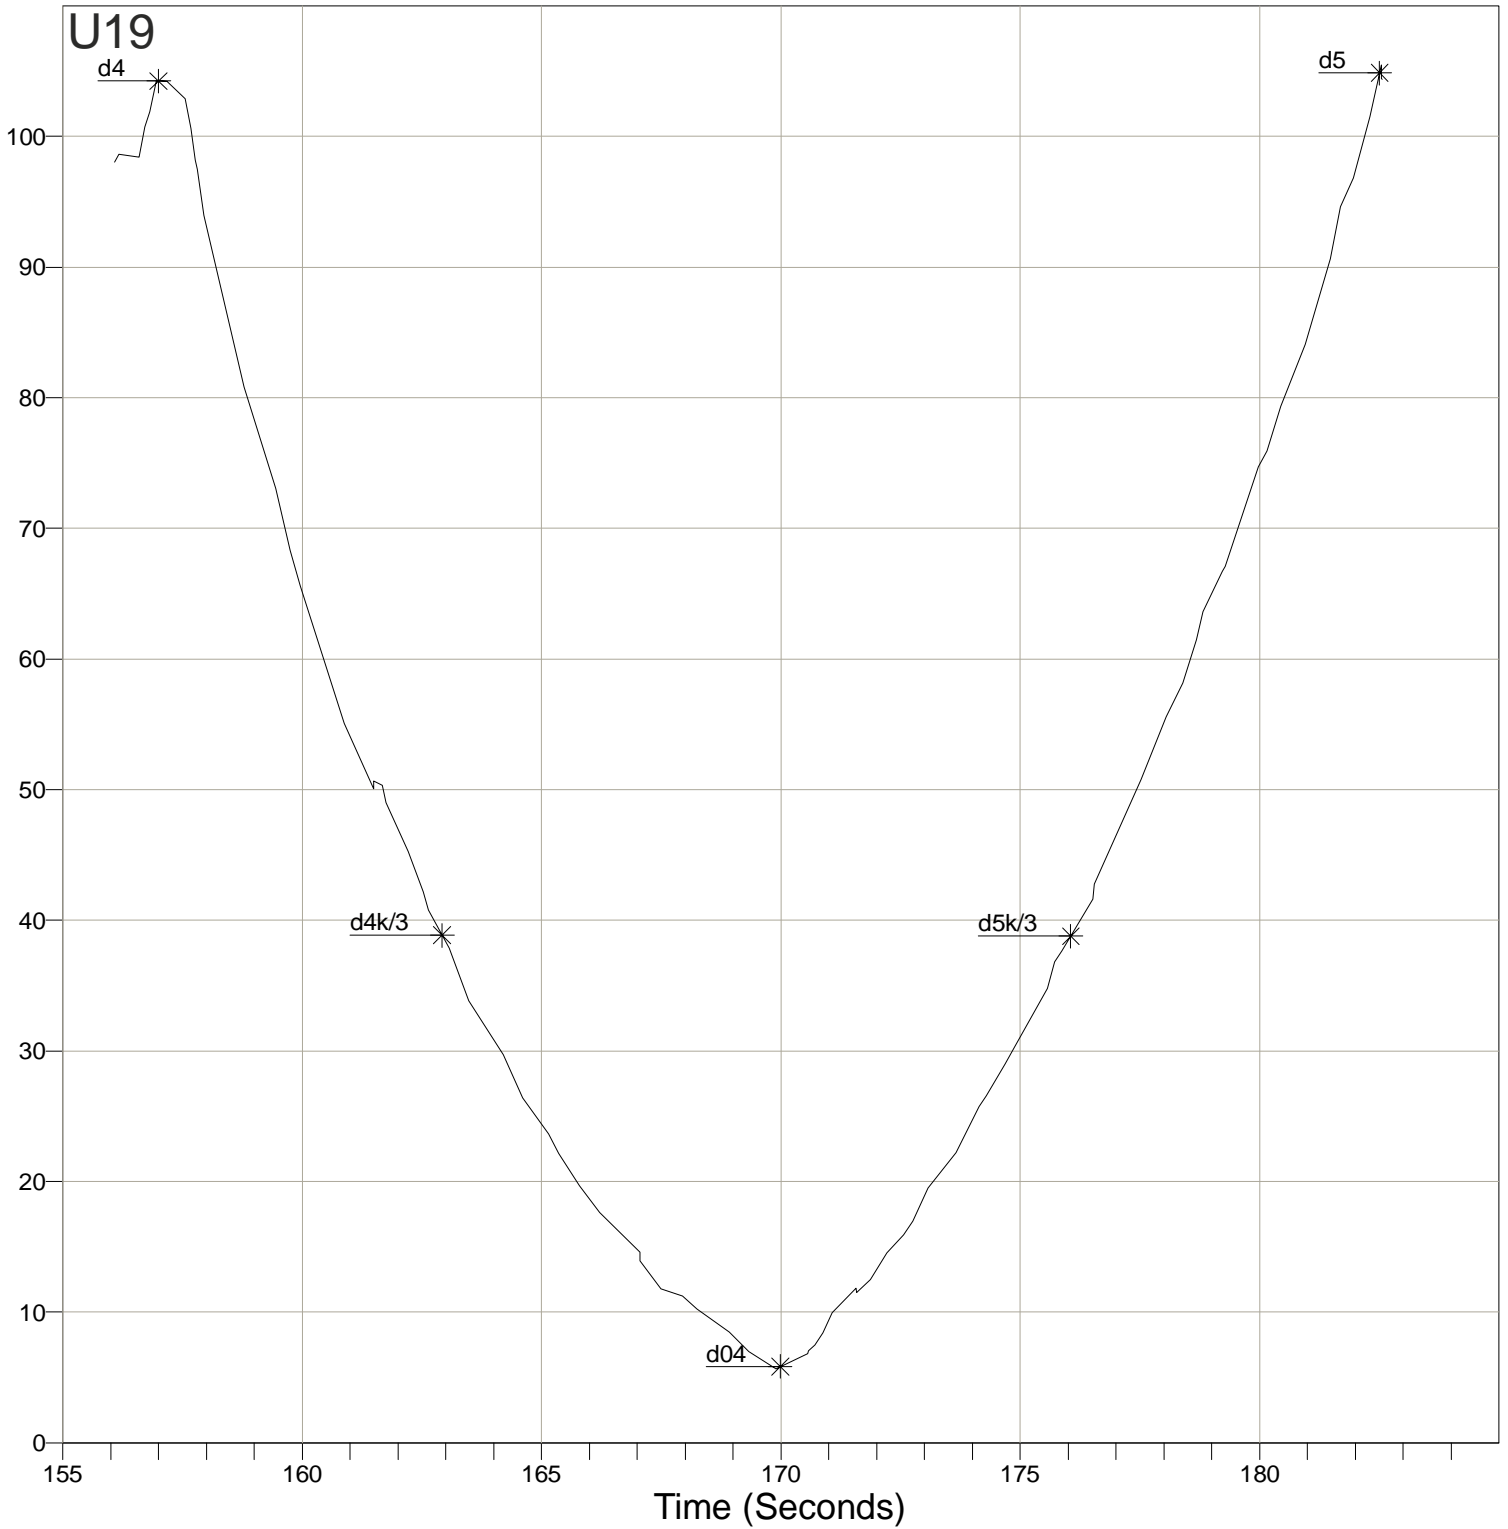



Load Reaction


Load / 100 sq. mm (N)

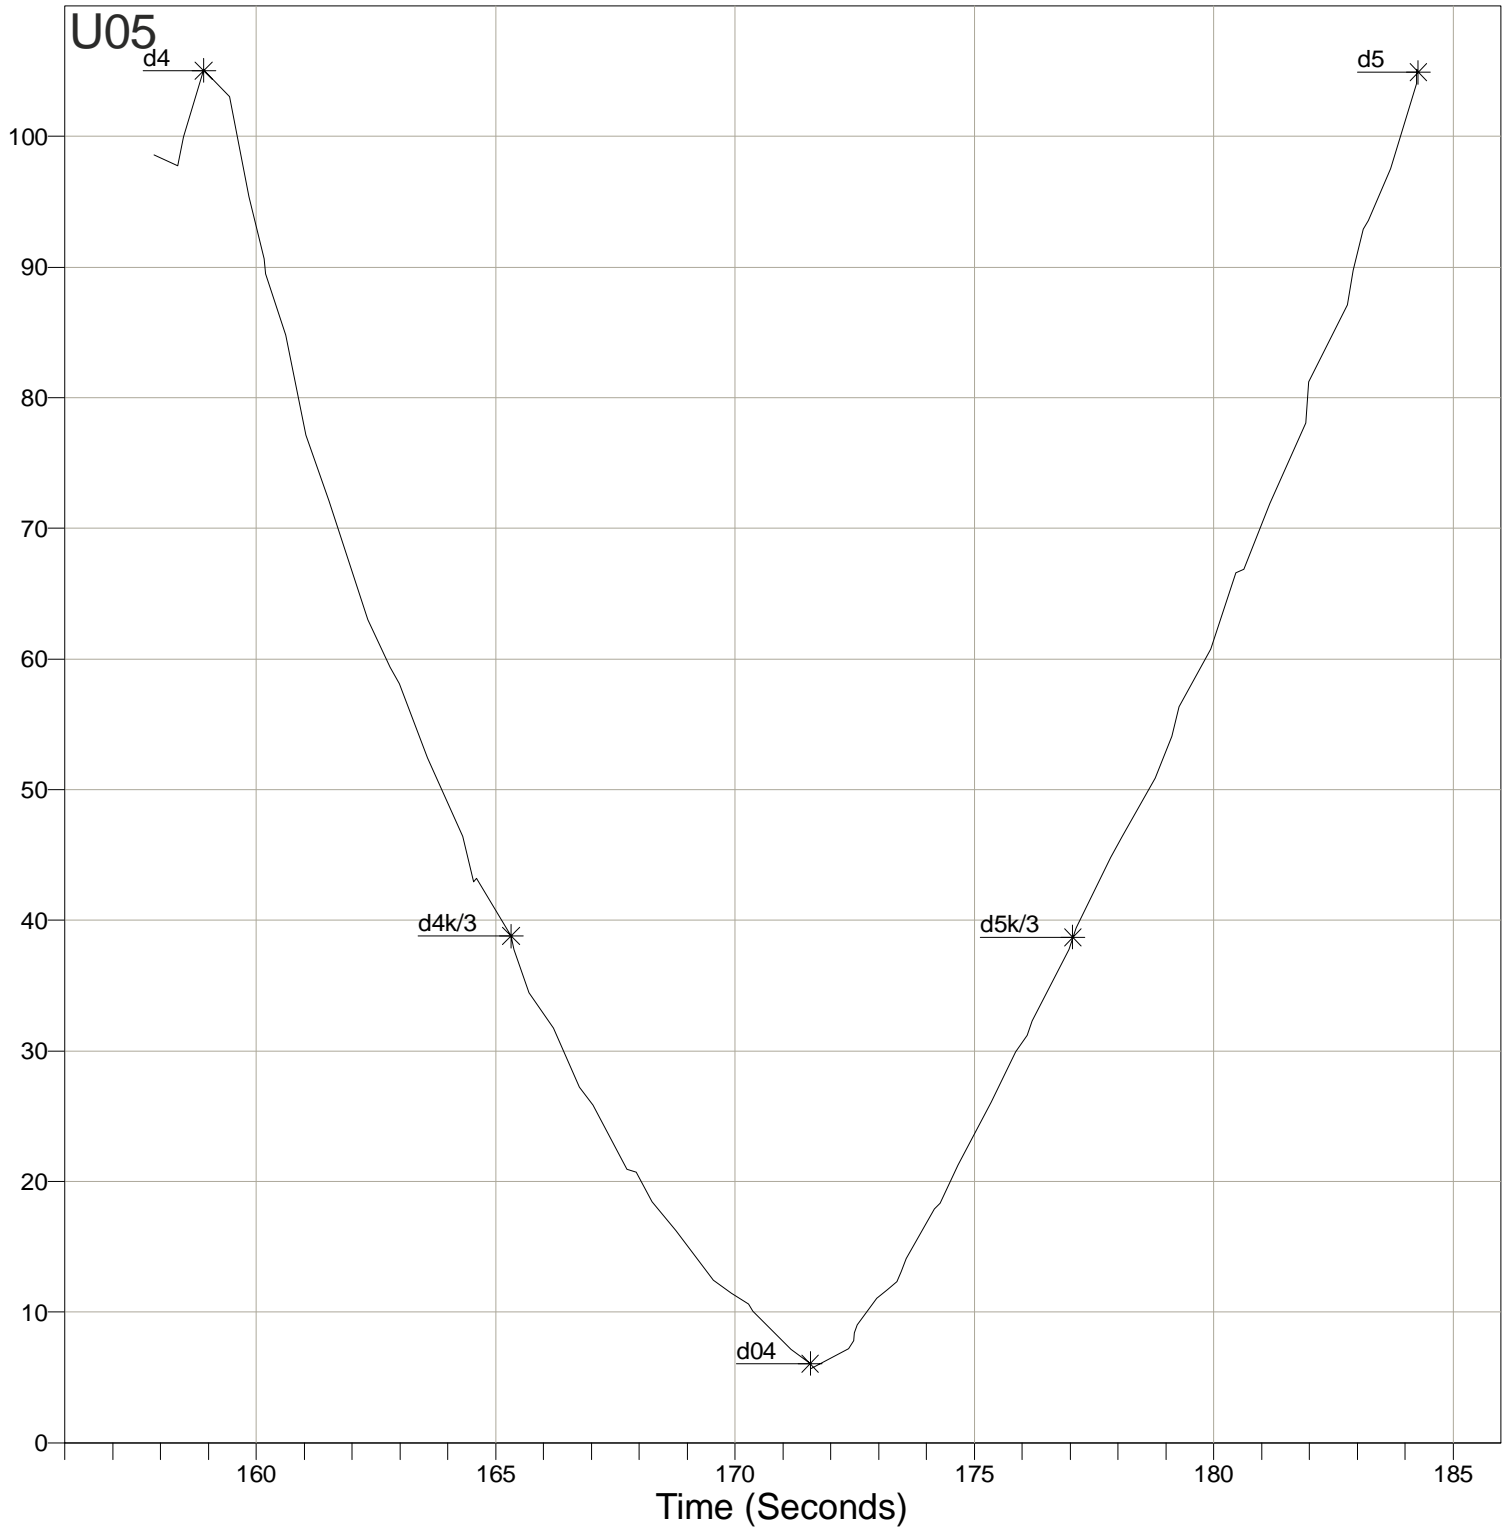



Load Reaction


Load / 100 sq. mm (N)

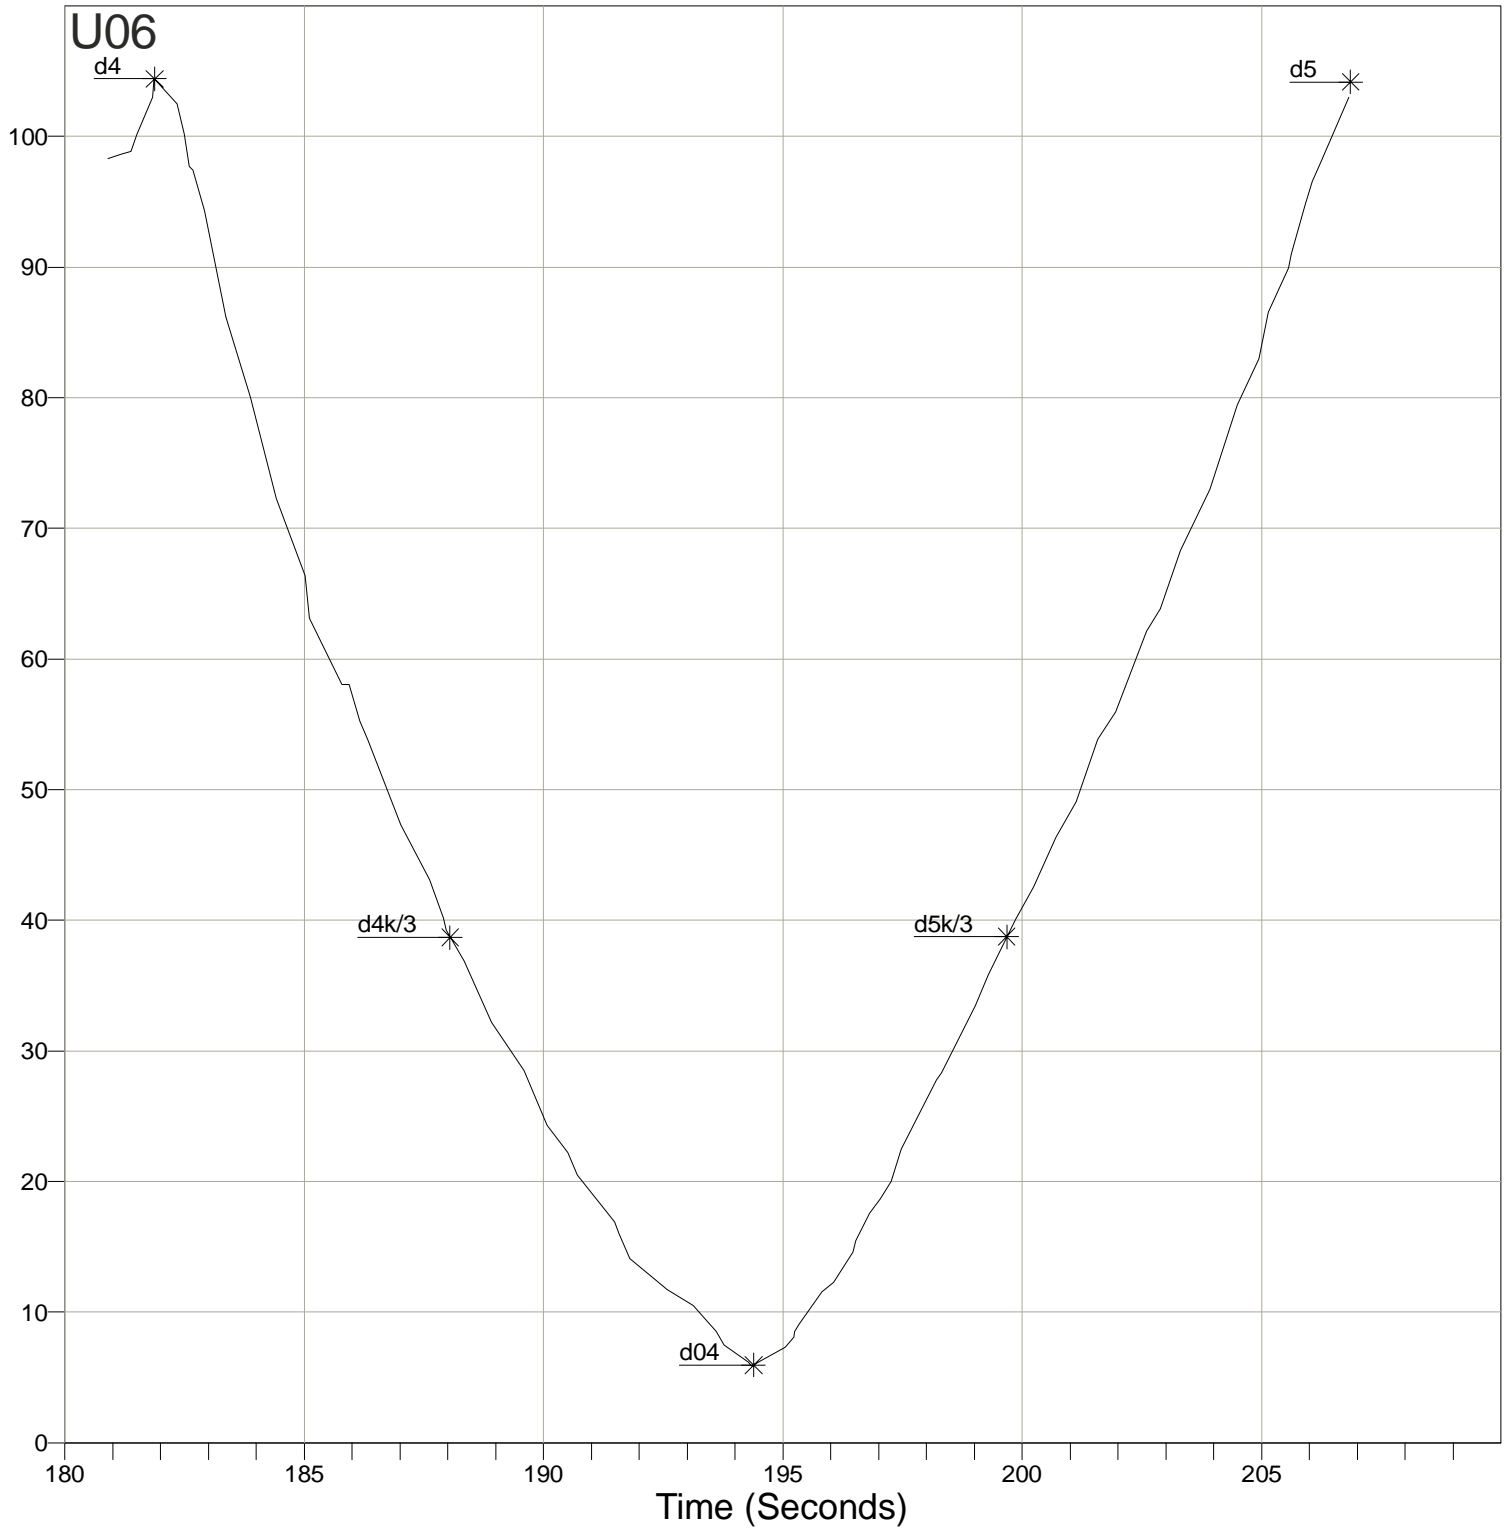



Load Reaction


Load / 100 sq. mm (N)

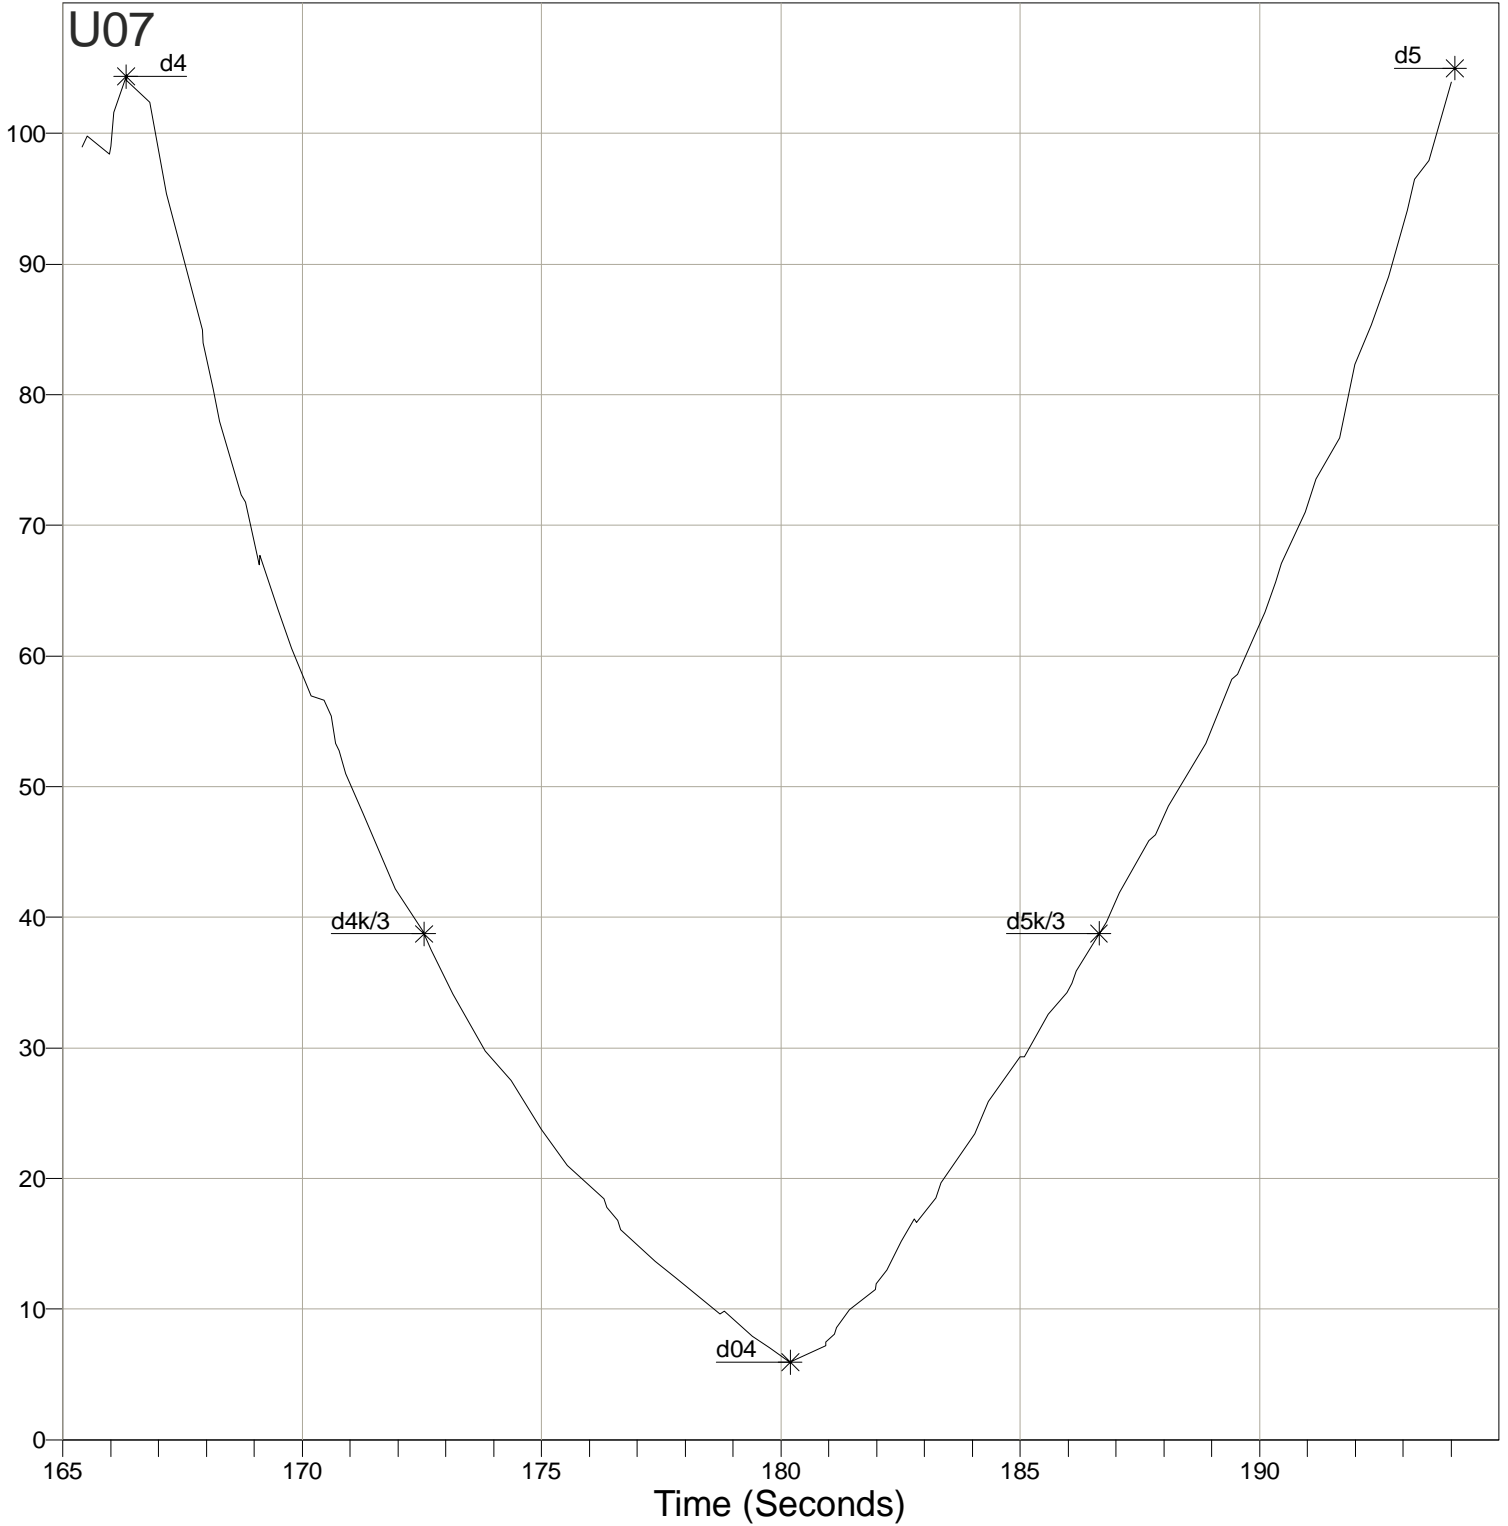



Load Reaction


Load / 100 sq. mm (N)

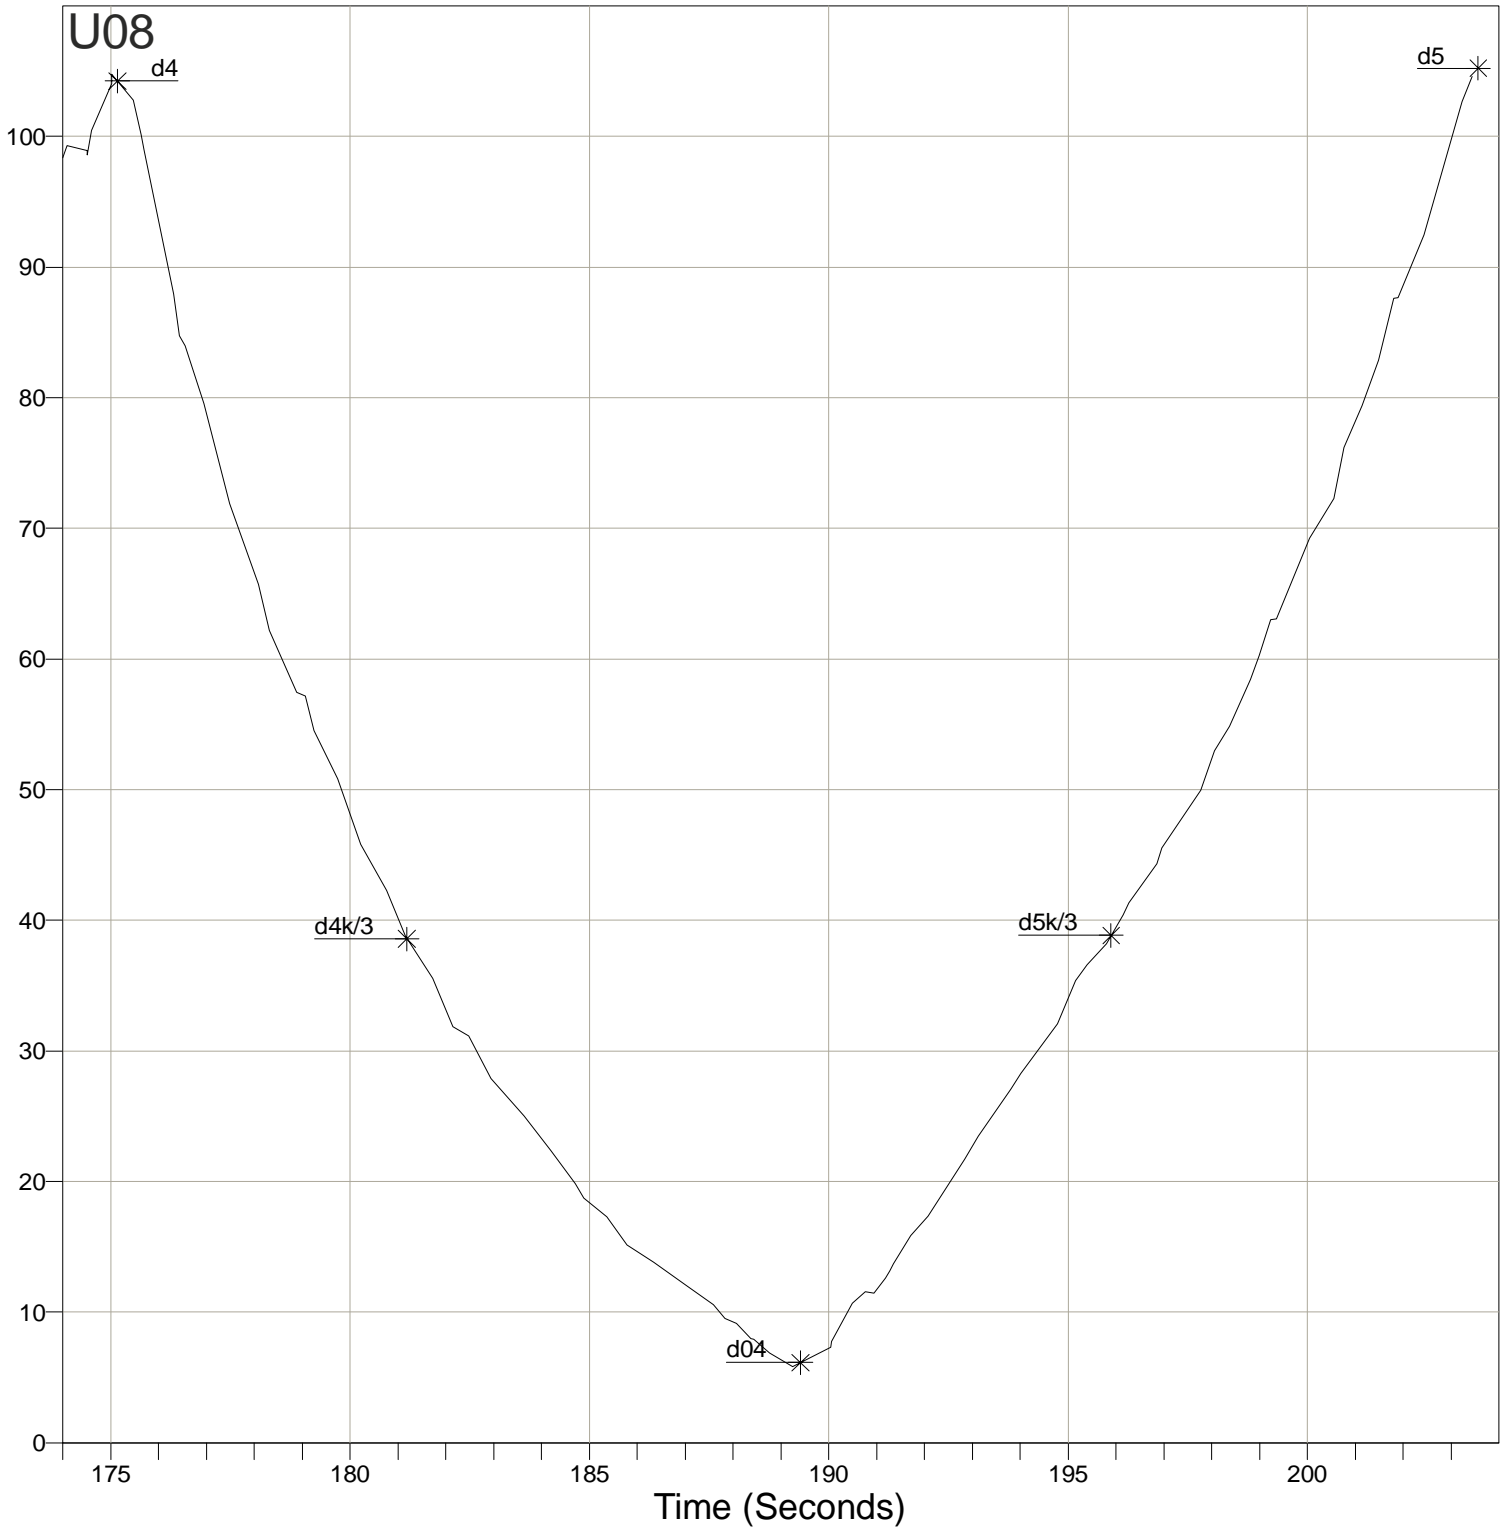



Load Reaction


Load / 100 sq. mm (N)

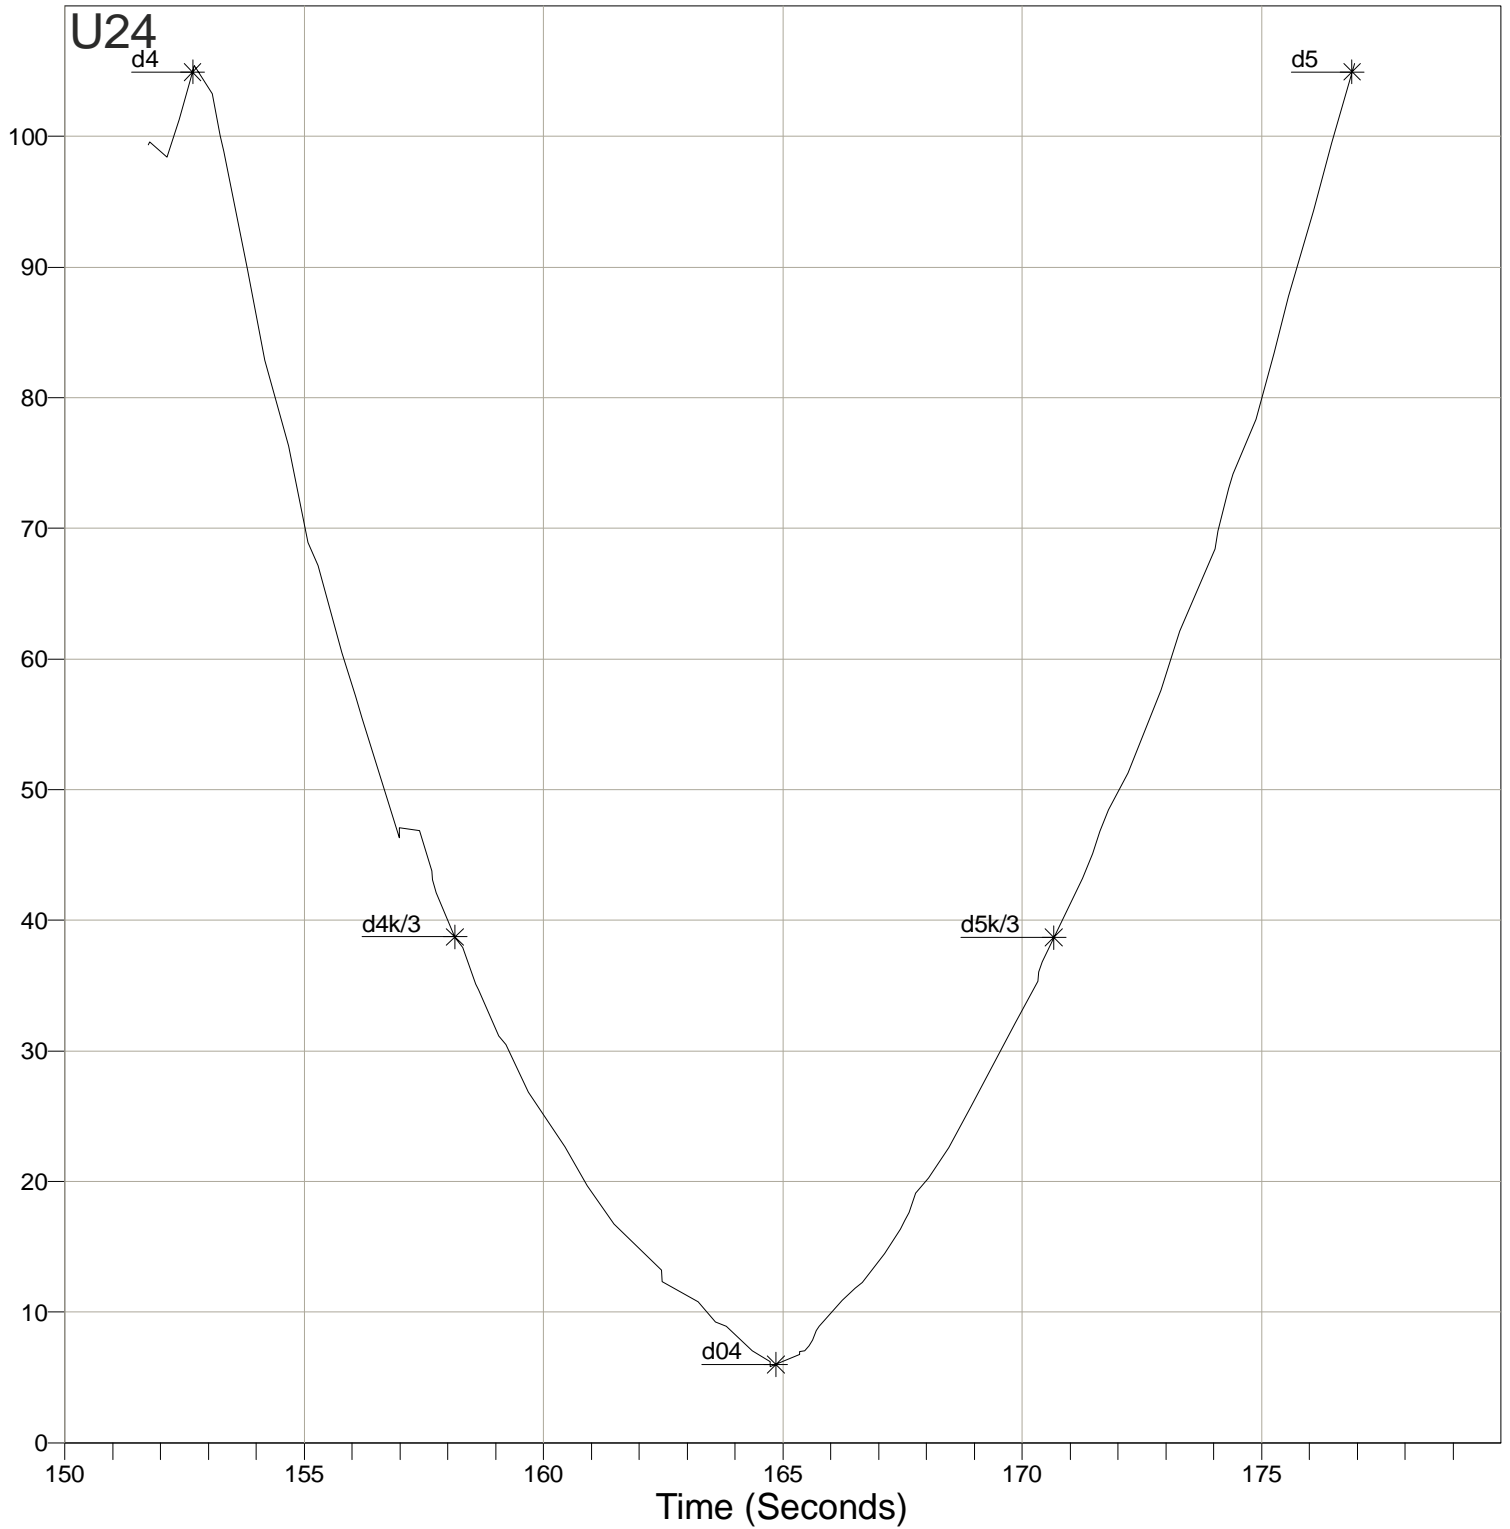



Load Reaction

Load / 100 sq. mm (N)

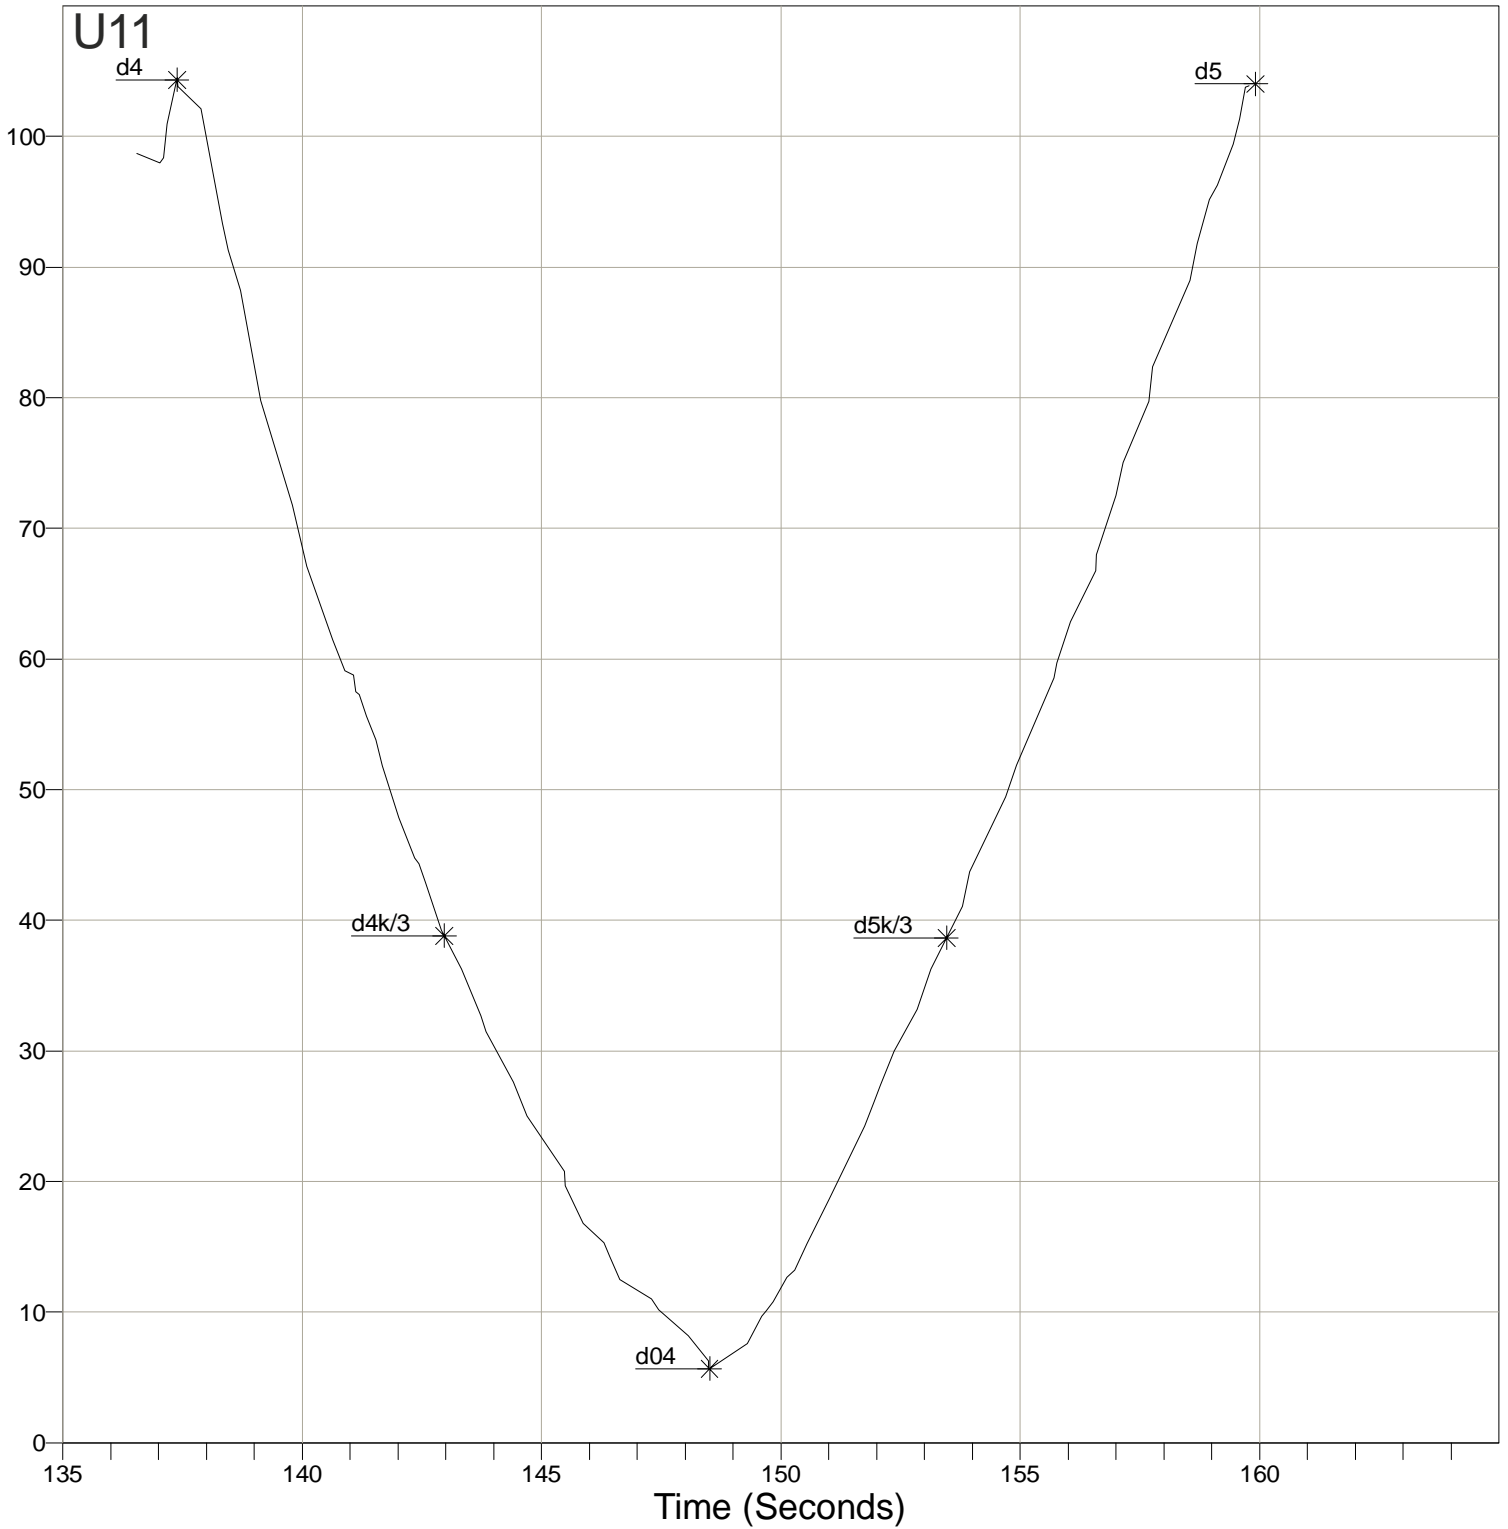




Load Reaction

Load / 100 sq. mm (N)

U12

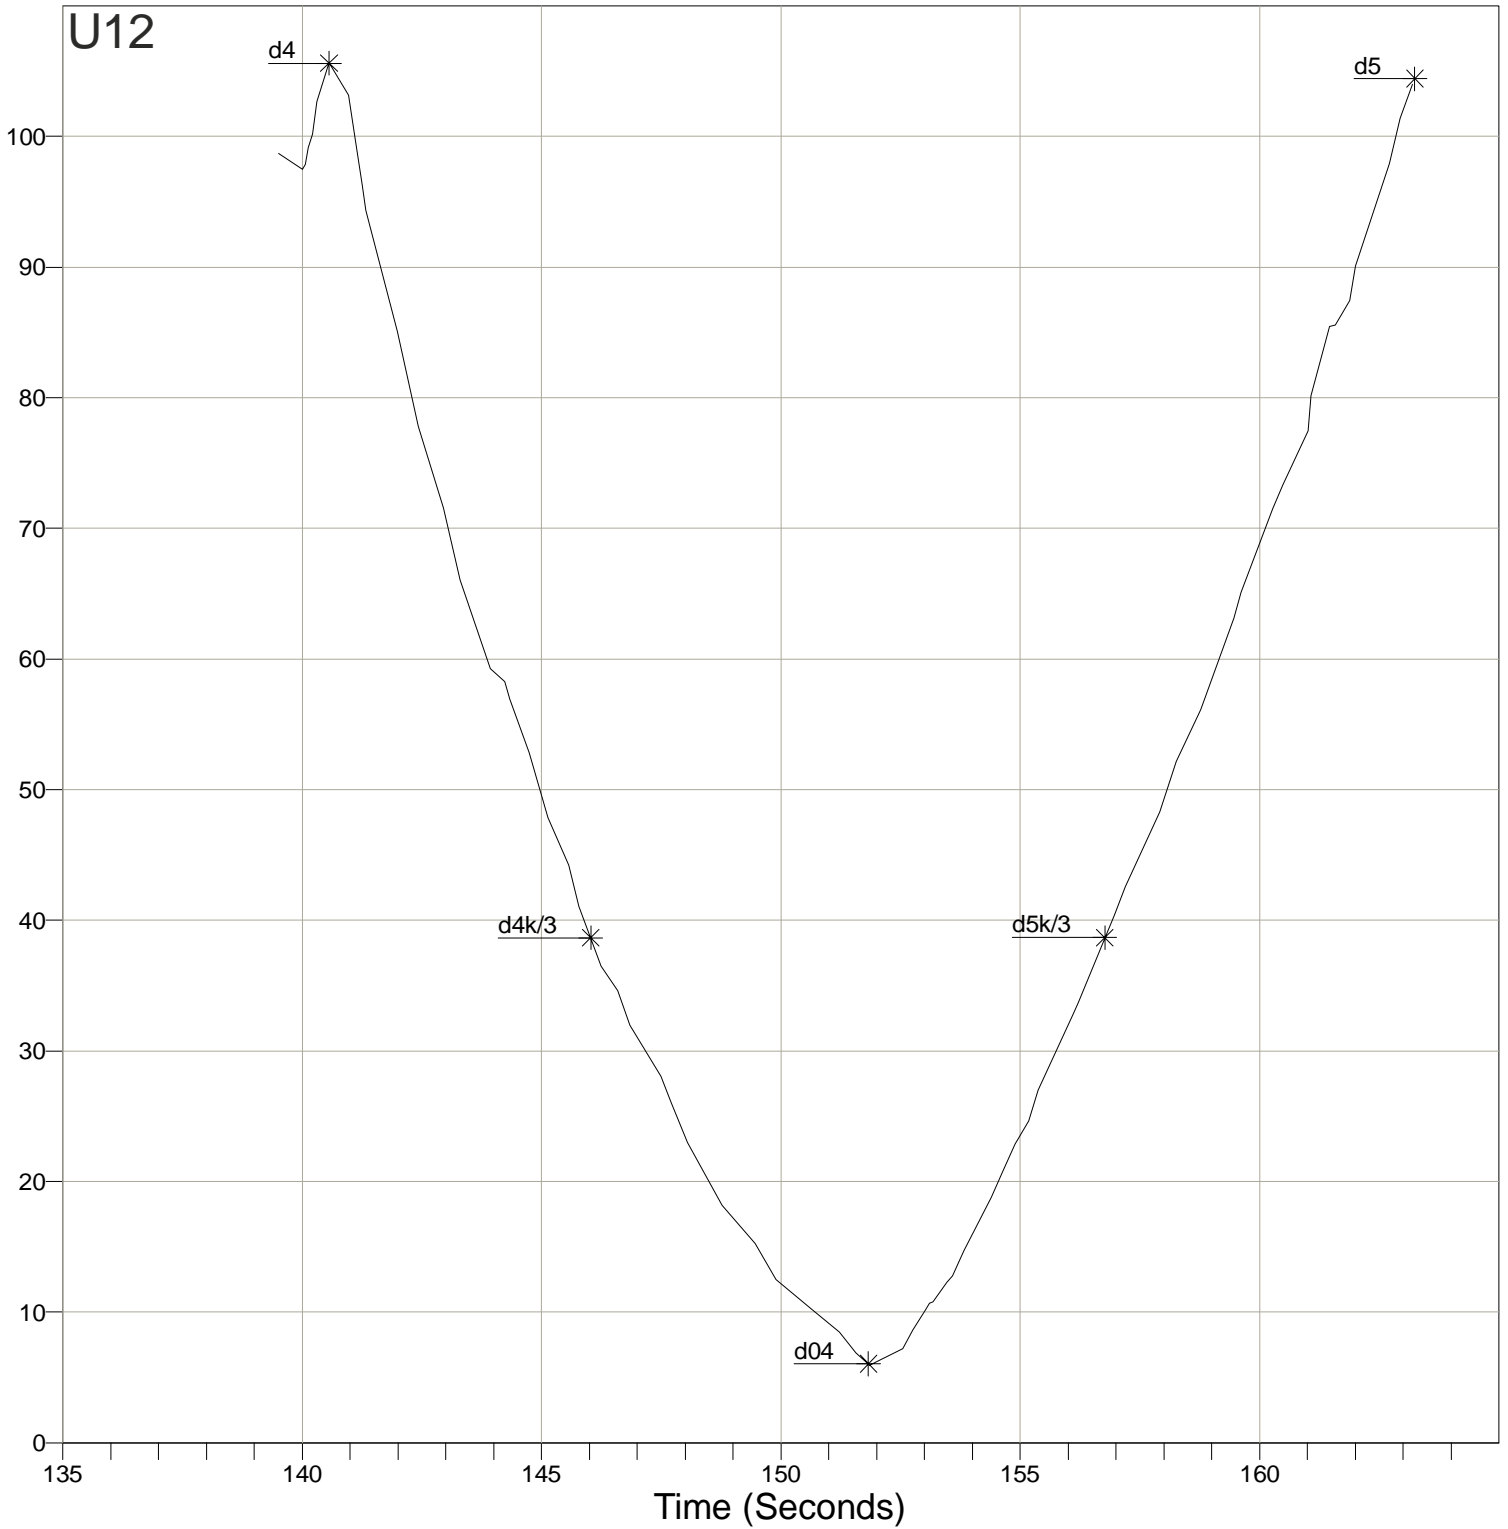



Load Reaction

Load / 100 sq. mm (N)

